

MODEL CTWH30 & CTWH36 PARTS LIST

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>	<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	803662	Damper Assembly	9	803680	Decorative Flue Bottom
2	803665	User Interface Switch Assy	10	803681	Decorative Flue Top
3	803670	Halogen Lamp Assy (incl bulb)	11	803686	Lampholder Support (CTWH30)
4	803816	Light Bulb		803697	Lampholder Support (CTWH36)
5	803672	Control Assembly	12	803687	Filter Front Support Assy (CTWH30)
6	803677	Heat Sentry		803698	Filter Front Support Assy (CTWH36)
7	803678	Grease Filter	13	803690	Transformer with Wires (CTWH30)
8	803679	Outlet		803701	Transformer with Wires (CTWH36)

NOT ILLUSTRATED

806367 Ribbon Cable Swtch - Cntrl Brd