

30" Oven Control Panel Parts List Single and Double Oven

Ref #	Part #	Description
1	805081	Control Head, 30, Snagl, Sst
	805104	Control Head, 30, Dbl, Sst
	805106	Control Head, 30, Snagl, Plt
	805107	Control Head, 30, Dbl, Plt
	805109	Control Head, 30, Snagl, Blk
	805110	Control Head, 30, Dbl, Blk
2	800948	Motor, Drive Assy., Sst (PTS #11031315 See Ref #14)
	801734	Motor, Drive Assy., Plt (PTS #11031315 See Ref #14)
	801733	Motor, Drive Assy., Blk (PTS #11031315 See Ref #14)
3	801231	C-Channel Bottom, 30", Sst
	801738	C-Channel Bottom, 30", Plt
	801740	C-Channel Bottom, 30", Blk
4	801230	C-Channel Top, 30", Sst
	801737	C-Channel Top, 30", Plt
	801739	C-Channel Top, 30", Blk
5	802964	Pin, Stop, Control Panel
6	801538	Screw, 8-32x1/2"
7	802791	Plate, Mounting, Right, Ctrl Panel
8	803484	Bearing, Flange, Control Panel
9	801920	Bracket, Switch, Control Panel
10	801549	Screw, 8-18x1/2"
11	801051	Switch, Actuation, Control Panel
12	801677	Screw, 2-56x3/8"
13	800704	Plunger, Control Display

36" Oven Control Panel Parts List Single Oven

Ref #	Part #	Description
1	805105	Control Head, 36, Snagl, Sst
	805108	Control Head, 36, Snagl, Plt
	805111	Control Head, 36, Snagl, Blk
2	800948	Motor, Drive Assy., Sst (PTS #11031315 See Ref #14)
	801734	Motor, Drive Assy., Plt (PTS #11031315 See Ref #14)
	801733	Motor, Drive Assy., Blk (PTS #11031315 See Ref #14)
3	801525	C-Channel Bottom, 36", Sst
	801742	C-Channel Bottom, 36", Plt
	801744	C-Channel Bottom, 36", Blk
4	801526	C-Channel Top, 36", Sst
	801741	C-Channel Top, 36", Plt
	801743	C-Channel Top, 36", Blk
5	802964	Pin, Stop, Control Panel
6	801538	Screw, 8-32x1/2"
7	802791	Plate, Mounting, Right, Ctrl Panel
8	803484	Bearing, Flange, Control Panel
9	801920	Bracket, Switch, Control Panel
10	801549	Screw, 8-18x1/2"
11	801051	Switch, Actuation, Control Panel
12	801677	Screw, 2-56x3/8"
13	800704	Plunger, Stainless Steel

Not Shown

803319 Spring, Ribbon Cable, Short