

**30" Oven Control Panel Parts List
Single and Double Oven**

Ref #	Part #	Description
1	805081	Control Head, 30, Sngl, Sst
	805104	Control Head, 30, Dbl, Sst
	805106	Control Head, 30, Sngl, Plt
	805107	Control Head, 30, Dbl, Plt
	805109	Control Head, 30, Sngl, Blk
	805110	Control Head, 30, Dbl, Blk
2	805178	Wall Oven Display Pinion Rpl. Pkg.
3	809725	Motor, Drive Assy., Sst
	809727	Motor, Drive Assy., Plt
	809726	Motor, Drive Assy., Blk
4	801231	C-Channel Bottom, 30", Sst
	801738	C-Channel Bottom, 30", Plt
	801740	C-Channel Bottom, 30", Blk
5	801230	C-Channel Top, 30", Sst
	801737	C-Channel Top, 30", Plt
	801739	C-Channel Top, 30", Blk
6	802964	Pin, Stop, Control Panel
7	801538	Screw, 8-32x1/2"
8	802791	Mtg, Control Panel, Rt SS
	801555	Mtg, Control Panel, Rt Black
	801556	Mtg, Control Panel, Rt Plat.
9	803484	Bearing, Flange, Control Panel
10	801920	Bracket, Switch, Control Panel
11	801549	Screw, 8-18x1/2"
12	809116	Switch, Actuation, Control Panel
13	801677	Screw, 2-56x3/8"
14	800704	Plunger, Control Display

**36" Oven Control Panel Parts List
Single Oven**

Ref #	Part #	Description
1	805105	Control Head, 36, Sngl, Sst
	805108	Control Head, 36, Sngl, Plt
	805111	Control Head, 36, Sngl, Blk
2	805178	Wall Oven Display Pinion Rpl. Pkg.
3	809725	Motor, Drive Assy., Sst
	809727	Motor, Drive Assy., Plt
	808726	Motor, Drive Assy., Blk
4	801525	C-Channel Bottom, 36", Sst
	801742	C-Channel Bottom, 36", Plt
	801744	C-Channel Bottom, 36", Blk
5	801526	C-Channel Top, 36", Sst
	801741	C-Channel Top, 36", Plt
	801743	C-Channel Top, 36", Blk
6	802964	Pin, Stop, Control Panel
7	801538	Screw, 8-32x1/2"
8	802791	Mtg, Control Panel, Rt SS
	801555	Mtg, Control Panel, Rt Black
	801556	Mtg, Control Panel, Rt Plat.
9	803484	Bearing, Flange, Control Panel
10	801920	Bracket, Switch, Control Panel
11	801549	Screw, 8-18x1/2"
12	809116	Switch, Actuation, Control Panel
13	801677	Screw, 2-56x3/8"
14	800704	Plunger, Stainless Steel

Not Shown

803319	Spring, Ribbon Cable, Short
803357	Mount, Cable-Tie, Adhesive