

30" Range Door and Riser Parts List

<u>Ref #</u>	<u>Part #</u>	<u>Description</u>
1	787622	Strip, Filler (Island Trim)
2	714589	Ring, Retaining
3	719287	Pin, Door Hinge
4	802808	Hinge, Door Stiffener Support Assy Lh
5	*Special Order, Call Factory Parts Department	
		Door, Oven Assy, 30"
6	766488	Panel, Back 30" Range
7	730228	Screw, #10-24 x 1/2"
8	769576	Liner, Door Assy 30"
	802809	Liner, Door Assy 30" (See SN Breaks)
9	720814	Window, Oven Door Lg.
10	723296	Clip, Oven Glass Retainer
11	722328	Glass, Oven Door
12	800635	30" Door Insulation
13	766374	Hinge, Door Stiffener Support Assy Rh
	802807	Hinge, Door Stiffener Support Assy Rh
14	800635	30" Door Insulation
15	730141	Screw, 1/4-20" x 1/2"
16	730308	Washer, Lock 1/4
17	787592	Channel Door Spacer
18	730239	Screw, #8 x 3/8"
19	769565	Skin, Door SS, 30" (See SN Breaks)
	800983	Skin, Door SS, 30" (See SN Breaks)
	769564	Skin, Door Black, 30" Range
20	719628	Bracket, Belly Bar RH
21	719627	Bracket, Belly Bar LH
22	720770	Handle, Oven Door, 30" Range
23	800925	Logo, Wolf, Large
24	730509	Clip, Tinnerman
25	730335	Washer, Lock #10
26	730028	Screw, #10-24 x 1"
27	722424	Trim, J Oven Window Lg.
28	803863	Spacer, Door 30" Range

NOTE: Door and door components prior to serial number 17000000. See page 4 & 5 for door and door components starting with serial number 17000000.

Not Shown

806659 Riser 5-R30
800015 Riser 10-R30
800019 Riser 20-R30