

700 Service Manual

General Information.....	2
Component Access & Removal.....	5
Air Flow & Fan Blade Spacing.....	22
Troubleshooting Guide.....	24
Sealed System.....	33
Icemaker Information.....	36
Technical Data.....	40
Wiring Diagrams.....	41

TABLE OF CONTENTS

Section 1 - General Information.....1-1
 Introduction/Address/Phone #'s1-2
 Important Safety Information.....1-3
Section 2 - Component Information.....2-1
 Door & Drawer Assemblies2-2
 Drawer Removal & Installation.....2-3
 Electronic Control System2-4
 Temperature Settings.....2-4
 Control Panel Removal.....2-4
 Control Board/Microprocessor.....2-6
 Location & Access.....2-6
 Zone Thermistors2-7
 Location & Removal2-7
 Air Baffles2-9
 Location & Removal2-9
 Evaporator Sump2-11
 Sump Area Access2-11
 Sump Component Removal2-12
 Defrost System2-13
 Lighting2-13
 Electronic Control Summary.....2-14
 Electrical System Overlay2-16
 Unit Tray Compartment2-17
 Unit Tray Assembly.....2-17
 Master Power Switch.....2-17
 Icemaker Solenoid Valve2-17

 12-Volt Transformer2-18
 Evap. Sump Drain Tube Heater2-18
Section 3 - Air Flow3-1
 700TR3-2
 700TC/I3-2
 700TF/I3-3
 700BR.....3-3
 700BF/I.....3-3
Section 4 - Parts Lists w/Exploded Views4-1
 700TR4-2
 700TC/I4-8
 700TF/I.....4-14
 700BR.....4-20
 700BF/I.....4-26
Section 5 - Troubleshooting Guides5-1
 General5-2
 Door Closing Check & Repair.....5-9
 TC/I Air Seals.....5-10
 Sealed System.....5-11
 Icemaker, Modular5-14
Section 6 - Technical Data6-1
Section 7 - Wiring Diagrams/Schematics.....7-1
 700TR7-2
 700TC/I7-4
 700TF/I.....7-6
 700BR.....7-8
 700BF/I.....7-10

INTRODUCTION

This manual has been prepared for your use in servicing Sub-Zero 700 Series units. Included are helpful facts on service, troubleshooting, specifications and parts information.

It is important that you familiarize yourself with the product as much as possible before initiating any maintenance, troubleshooting or repairs.

IMPORTANT: Always refer to the most current Service Parts Price List for any parts that have been superceded by serial number.

The model and serial number tag is located above the top left drawer slide assembly. Always have this information available when contacting the Sub-Zero Technical Assistance Department, and whenever ordering parts from the Parts Distributor.

TECHNICAL ASSISTANCE

If you should have any questions regarding the 700 Series and/or this manual, please contact:

*Sub-Zero Freezer Company, Inc.
ATTN: Service Department
P.O. Box 44988
Madison, WI 53744 - 4988*

Customer Service & Parts / Warranty Claims
Phone #: (800) 222 - 7820

Technical Assistance
Phone #: (800) 919 - 8324

Customer Service & Technical Assistance
Facsimile #: (608) 441 - 5887

Parts / Warranty Claims
Facsimile #: (608) 441 - 5886

Service Department E-Mail Address:
customerservice@subzero.com

Office Hours:
7:00 AM to 7:00 PM Central Time
Monday through Friday

This manual is designed to be used by Authorized Service Personnel only. Sub-Zero Freezer Co., Inc. assumes no responsibility for any repairs made on Sub-Zero refrigeration units by anyone other than Authorized Service Technicians.

IMPORTANT SAFETY INFORMATION

At right are the Product Safety Labels used in this manual. The “Signal Words” used are WARNING or CAUTION.

Below the Product Safety Labels is a description of the precautions to be taken when the signal word is observed.

When reviewing this manual, please note these different safety labels places in areas where awareness of personal safety and product safety should be taken.

⚠ WARNING
Indicates that hazards or unsafe practices could result in severe personal injury or death.

⚠ CAUTION
Indicates hazards or unsafe practices could result in minor personal injury or product and/or property damage.

DOOR ASSEMBLY

The door assembly consists of the

- door liner
- frame
- sheet metal pan
- solid foam core.

A magnet is installed beneath the door liner at the top of the door. As the door opens and closes, the magnet aligns with a sensor located behind the control panel at the top of the compartment. This sensor activates the lights and door alarm.

The door gaskets on a 700 Series are pressed into a retaining channel in the door liner (Figure 2-1).

There are molded grooves in the end caps of the adjustable door shelves and dairy compartment assembly. To position the adjustable door shelves and dairy compartment assembly, slide the grooves in the end caps over the knobs formed in the door liner (Figure 2-2).

NOTE: Only models 700TC/I and 700TR come equipped with the dairy compartment assembly.

DRAWER ASSEMBLY

General

Drawer assemblies consist of

- a drawer front liner
- drawer front frame
- drawer front sheet metal pan
- solid foam core
- coated steel drawer tub
- removable drawer divider
- electronic control panel*

* On models 700BR and 700 BF/I, the upper drawer assembly contains the electronic control panel.

NOTE: Freezer drawer tubs (700TC/I, 700TF/I, 700BF/I) have air vents necessary for proper air flow, and are not interchangeable with solid refrigerator drawer tubs (700TR, 700BR).

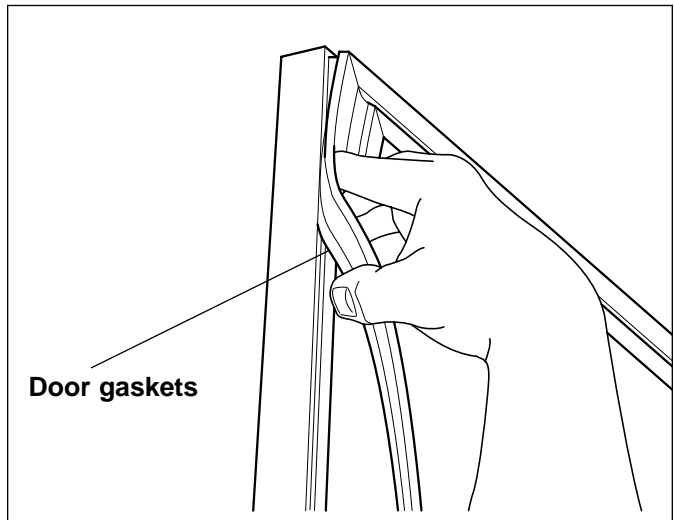


Figure 2-1. Door Gaskets

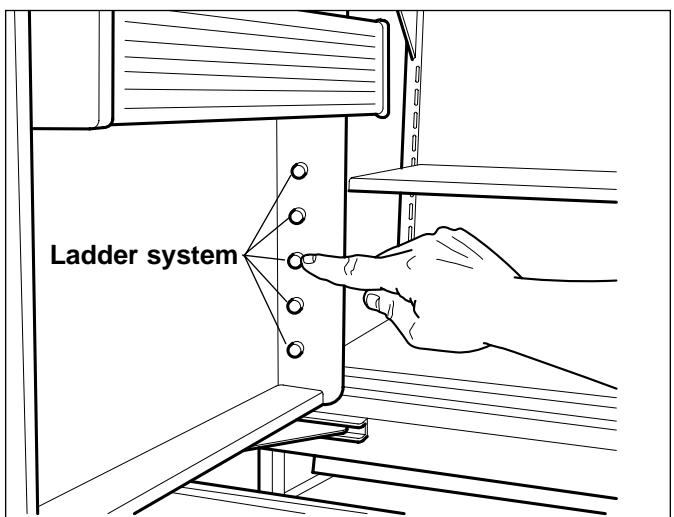


Figure 2-2. Door Shelves and Dairy Compartment

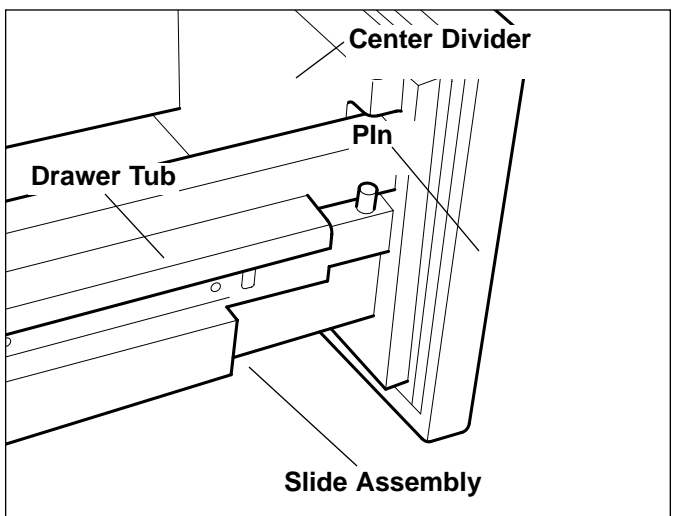


Figure 2-3. Drawer Removal

Drawer Removal and Installation

▲ CAUTION

On 700BR and 700BF/I, the top drawer has a control cable that must be disconnected before drawer removal.

1. Base-Unit Top Drawer Removal:
 - a. Pull top drawer forward 6” to 10”, lift up off of the pins at front. Continue to pull drawer forward while pushing slide assemblies back. Then lie drawer face down, directly in front of unit.
 - b. Disconnect display cable from left of rear duct by turning counterclockwise and pulling (Figures 2-4, 2-5 & 2-6).
2. Drawer Removal: To remove all other drawers, pull drawer forward 6” to 10”, lift up off of the pins at front. Continue to pull drawer forward off of slide assembly (Figure 2-3).
3. Drawer Re-installation: Extend slide assemblies forward and lay drawer tub side flanges over slide assemblies. From underneath, pull slide assembly forward until pins at front line up with drawer tub locating holes.

NOTE: Right slide assembly must be positioned between right side drawer tub flange and peg at back right corner of drawer assembly.

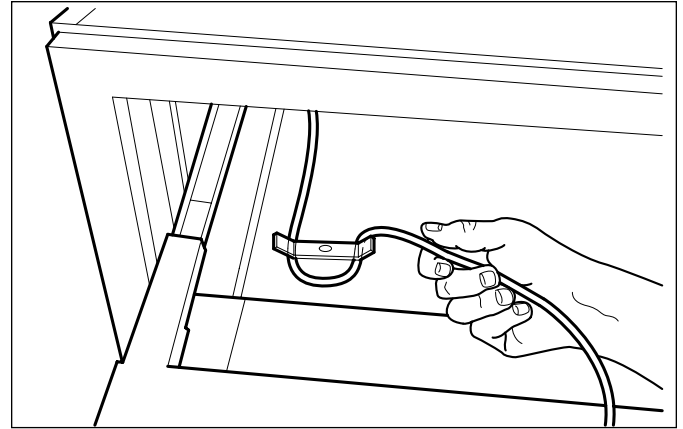


Figure 2-4. Display Cable

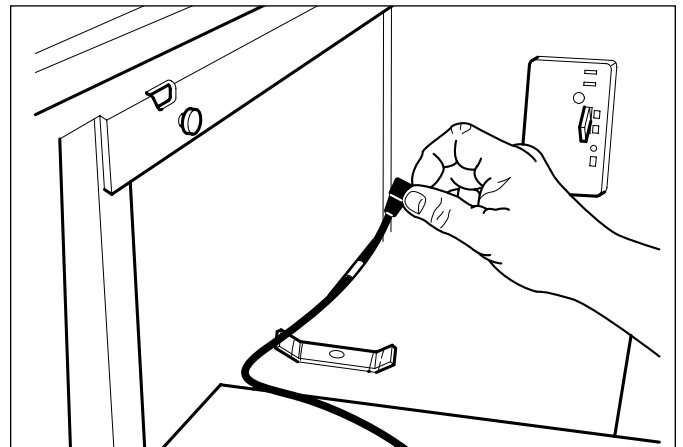


Figure 2-5. Display Cable

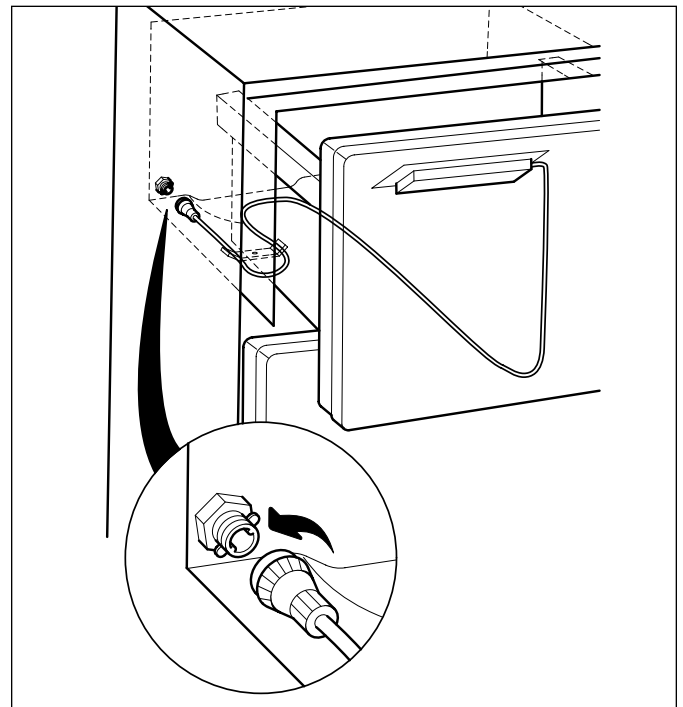


Figure 2-6. Display Cable

ELECTRONIC CONTROL SYSTEM

The 700 Series electronic control system consists of a control board and a display board. The control board includes the microprocessor relays, low voltage transformers, electrical connections and an alarm buzzer. The display board, which is part of the control panel, includes an LCD (Liquid Crystal Display), input buttons for setting controls, and an alarm button. Below are instructions for setting temperatures and for control panel removal.

NOTE: If the door is open for more than 15 seconds the alarm will sound. The alarm can be disabled by pushing the ALARM button (Figure 2-7). The alarm will default to ON after a power outage.

Temperature Settings

Normal operation of the display shows the temperature of each zone (or compartment) at five second intervals. The appropriate zone indicator lights up when the corresponding temperature is displayed. The following steps are necessary to adjust temperatures.

1. Press ZONE key to show the temperature set point for each zone (See Figure 2-8). Press the zone key until the desired zone is flashing on the LCD.
2. Press the WARMER or COLDER key to achieve the desired temperature (Figure 2-8). When setting is complete, wait for five seconds and the control will return to normal operation.

NOTE: To adjust temperatures in next zone, repeat steps 1 and 2 above.

Upper Control Panel Removal Models 700TR, 700TC/I, 700TF/I

1. Remove the rear mounting screws at the back of the light diffuser.

NOTE: Do not remove the light diffuser to access the mounting screws. Look behind the diffuser panel (Figure 2-7).

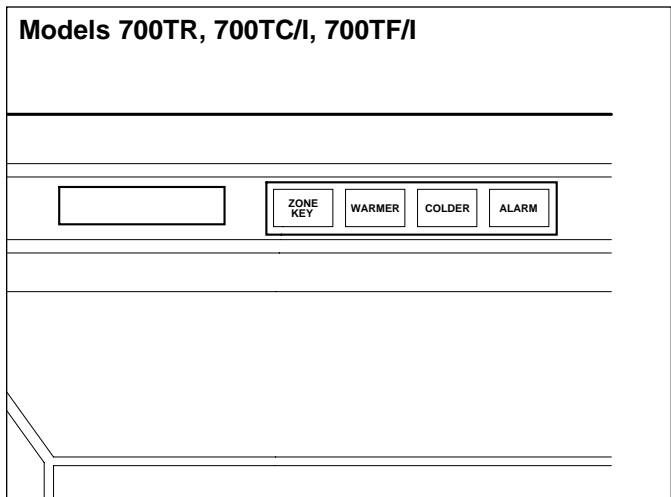


Figure 2-7. Electronic Control Panel

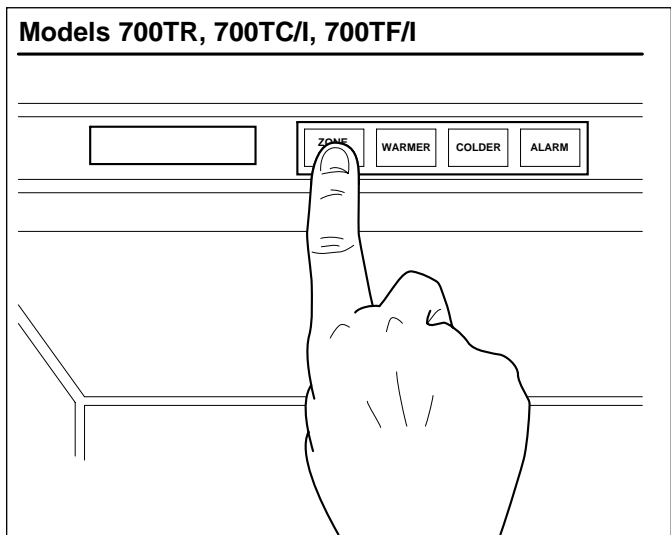


Figure 2-8. Control Panel

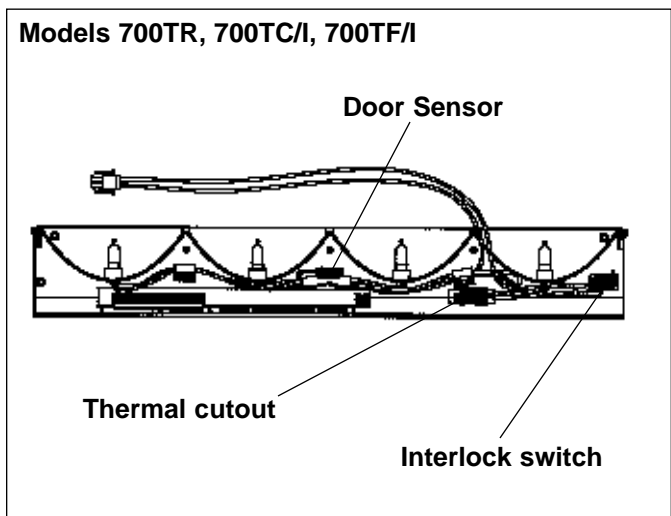


Figure 2-9. Control Panel Electrical Connections

2. To open the upper control panel front, grasp the outer top corners and pull down.
3. Disconnect the leads supplying power to the control panel. Remove the three front mounting screws. The center screw is the ground screw (Figure 2-9).
4. Pull the complete upper control assembly forward and down, (which includes the control board, glass light diffuser, reflectors and halogen lamps (Figure 2-9).
5. Disconnect electrical supply at the top of upper control panel assembly (Figure 2-10).

NOTE: Reverse steps 1 - 5 to reassemble. Make sure ground screw is used at front center only.

⚠ WARNING

Halogen lamps are extremely hot! Allow lamp to cool before attempting to handle.

⚠ CAUTION

Do not touch lamp with bare hands. Oils from skin will reduce the life of the lamp. If lamp is touched with bare hands, clean lamp with denatured alcohol and wipe dry with lint free cloth.

**Control Panel Removal
Models 700BR, 700BF/I**

1. Remove the three screws inside top drawer assembly (Figure 2-11). Then tilt control panel towards back of the drawer tub.
2. Now disconnect the power supply to the control panel (Figure 2-12).

NOTE: Reverse steps to reassemble.

Models 700BR, 700BF/I

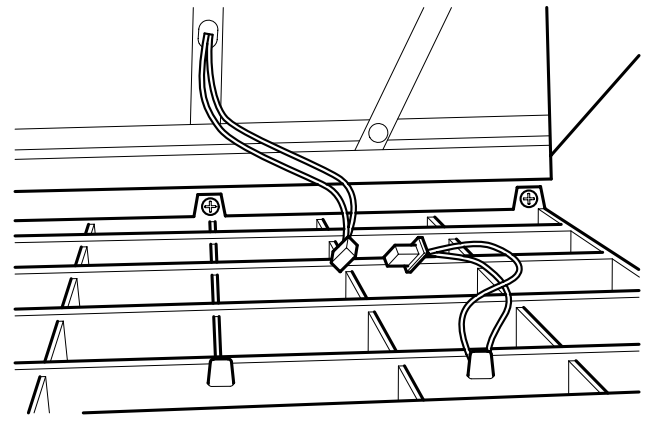


Figure 2-10. Control Panel Electrical Supply

Models 700BR, 700BF/I

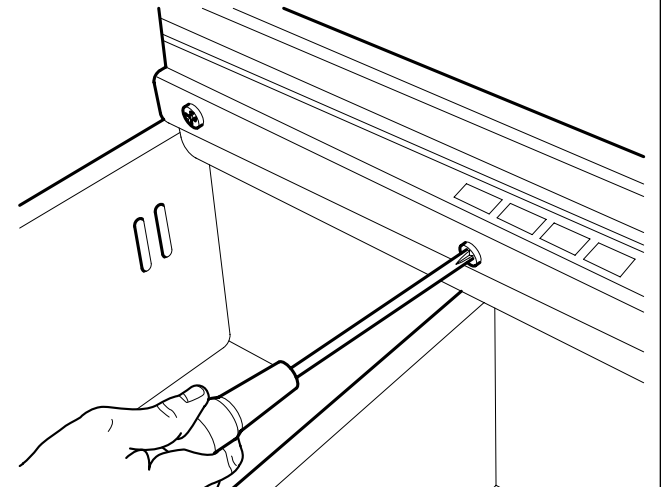


Figure 2-11. Control Panel Screws

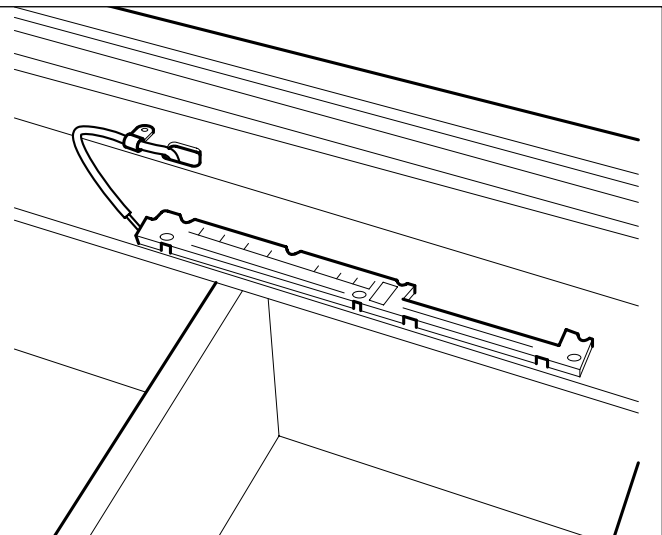


Figure 2-12. Control Panel Power Supply

CONTROL BOARD/MICROPROCESSOR

The control board contains the microprocessor which processes information throughout the rest of the cabinet, through thermistors, wiring and relays. The control board is also equipped with terminals to test for failed or failing components. For proper testing, please refer to the Troubleshooting Guide. The location of the control board is described below, along with the procedure for accessing it.

NOTE: Removing both drawers (all models) and the lower mullion divider (700TR & 700BR only) will allow more room for control board access.

Control Board Location and Access

MODELS 700TR, 700TC/I, 700TF/I

The control board is located in the ceiling of the upper drawer compartment (Figure 2-13).

1. To access the control board, pull top drawer forward 6" to 10", lift up off of the pins at front. Continue to pull drawer forward off of slide assembly.
2. Remove eight screws from the microprocessor cover and let the cover drop down to expose the control board (Figure 2-13).

MODELS 700BR, 700BF/I

The control board is located on the right hand side of the evaporator sump area (Figure 2-14).

1. To access the control board assembly, first remove the drawer assemblies by pulling for-

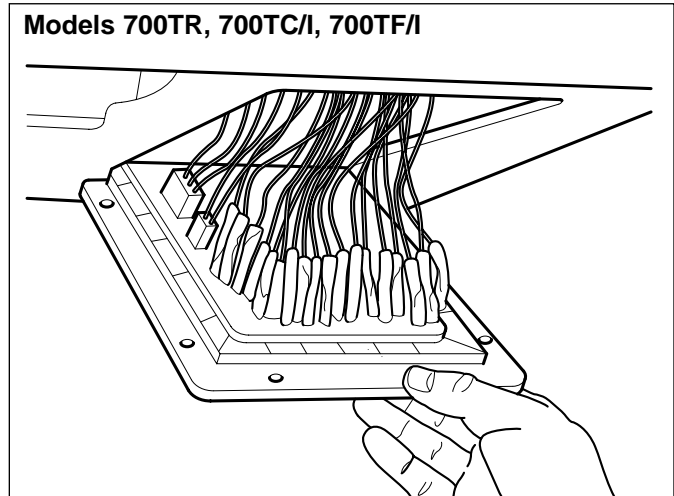


Figure 2-13. Control Board Location

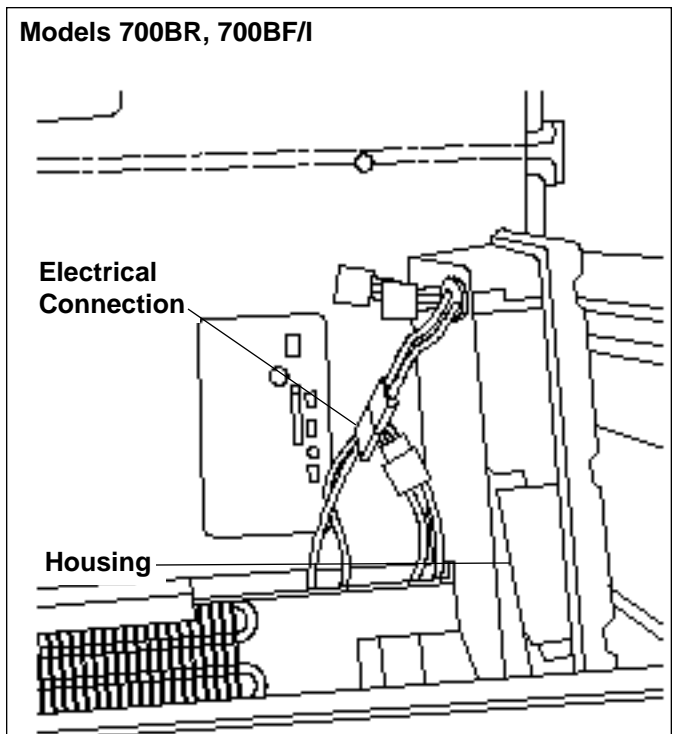


Figure 2-14. Evaporator/Sump Area

CAUTION

The top drawer of the 700BR & 700BF/I have a control cable that must be disconnected before drawer removal (See Drawer Removal Instructions).

- ward and lifting off of pins at front.
2. Now remove the evaporator cover by removing six retaining screws, then pull the evaporator cover towards you to expose the sump area.
3. Disconnect the electrical connections and slide the gray control board housing up and out of

the sump.

ZONE THERMISTORS

In the 700 series, it is possible to independently control temperatures in each zone. This is accomplished in part by thermistors, which are simply resistors that change resistance as the surrounding temperature changes. The microprocessor constantly monitors the thermistor's electronic signal and, as resistance changes, the microprocessor electronically reads the signal as temperature. In turn, the microprocessor initiates compressor and condenser fan run time, evaporator fan motor run time, when the baffles open and close for proper air flow, and determines the proper timing and duration of defrost. Zone thermistor location is described below, along with an explanation of their function, and the procedure for their replacement.

Zone Thermistor Location and Removal

MODELS 700TF/I, 700BF/I

The input temperature range in all these freezer models is from -5°F to +5°F, and is uniform throughout the cabinet. In other words, there is one zone and one thermistor for that zone. The thermistor is located behind the upper drawer in the reed switch assembly (Figure 2-15).

1. To replace the thermistor, the complete reed switch assembly must be replaced. Remove the mounting

⚠ CAUTION

The top drawer in the 700BF/I has a control cable that must be disconnected before drawer removal (See Drawer Removal Instructions).

screw, tilt the top of the reed switch assembly forward and disconnect the electrical connector.

NOTE: Be sure to check Troubleshooting Guide for proper thermistor testing procedures.

NOTE: The upper and lower reed switches are not interchangeable in the models 700 TF/I and 700BF/I (Figure 2-19).

MODELS 700TR, 700BR

The input temperature range in all these refrigerator

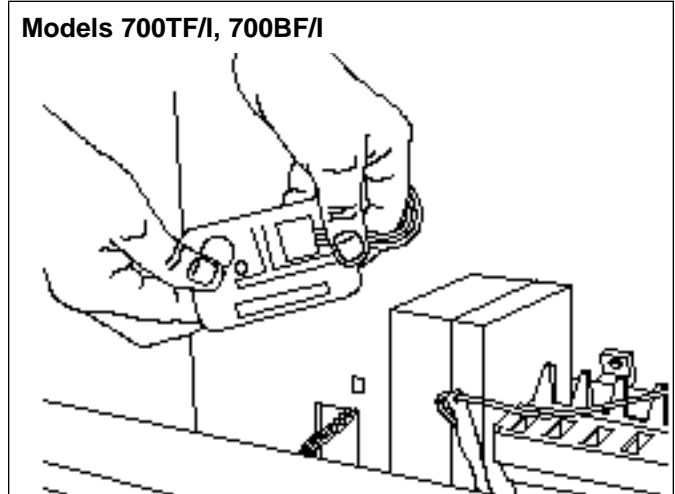


Figure 2-15. Thermistor Location

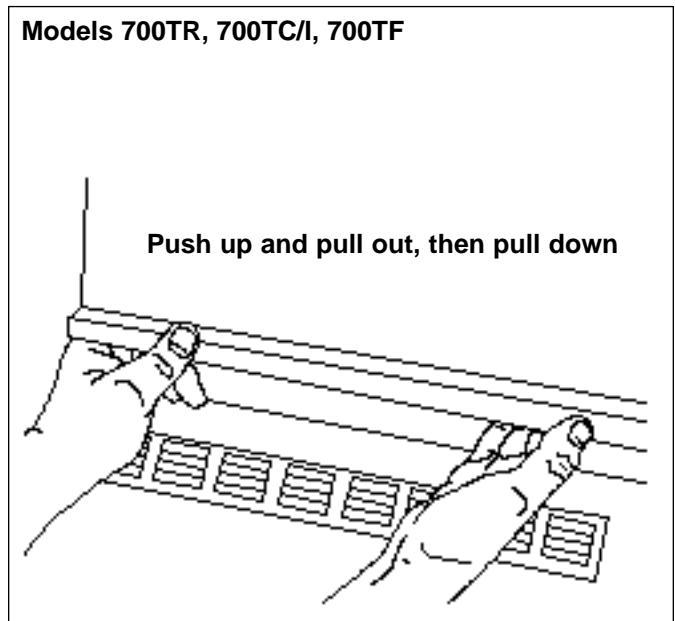


Figure 2-16. Back Duct Removal

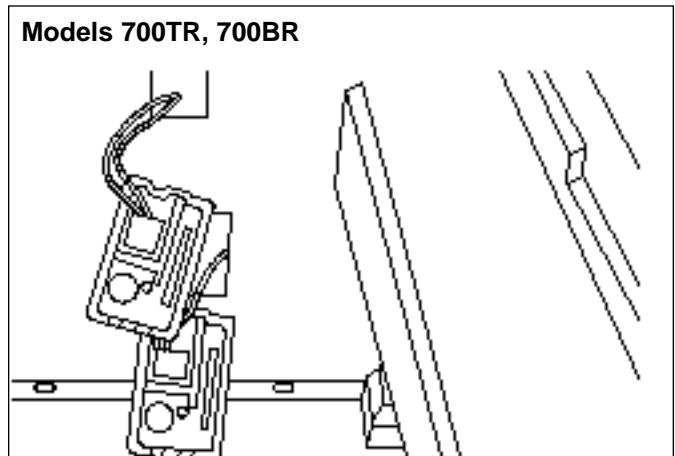


Figure 2-17. Thermistors In Reed Switch

models is from 34°F to 45°F. Each compartment, or zone, can be independently temperature controlled up to 3°F colder than the zone above it. Therefore a thermistor is used in each compartment (three thermistors in the 700TR and two in the 700BR). (See example, [Figure 2-18](#)). The thermistor in the upper cabinet zone of the 700TR (behind the back duct cover) and the thermistor in the upper drawer zone of the 700BR (inside the reed switch) govern compressor run time .

1. To access the thermistor in the upper cabinet zone of the 700TR, lift the bottom of the back duct cover up, then pull forward and down ([Figure 2-16](#)). Once the cover is removed, the thermistor is exposed at the bottom right rear wall, remove the clamp and disconnect the electrical connection to remove.

NOTE: Be sure to check Troubleshooting guide for proper thermistor testing procedures.

2. Thermistors are located in each reed switch behind the drawer assemblies of each compartment ([Figure 2-17](#)). To replace the thermistor the complete reed switch assembly must be replaced. Simply remove the reed switch mounting screw, tilt the top of the

Models 700TR, 700BR	
Can be set between 32°F - 45°F Example - 38°	Can be set between 32°F - 45°F Example - 38° No colder than 35°
No colder than 35°	
No colder than 32°	

Figure 2-18. Thermistor Control Example

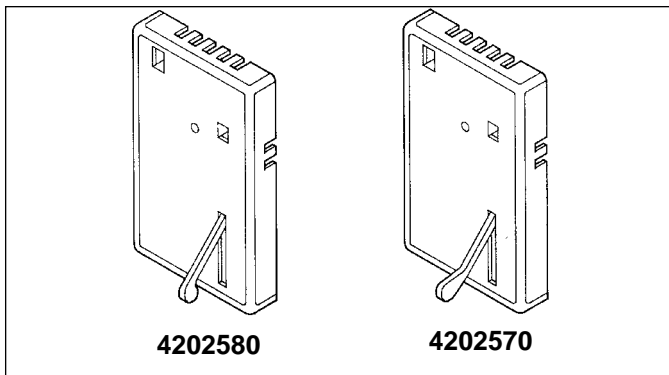


Figure 2-19. Reed Switches

reed switch assembly forward and disconnect the electrical connector.

cycle off but the evaporator fan will continue to run, forcing cool air through the baffle up to the refrigerator zone until it reaches its setpoint. If the refrigerator zone has reached setpoint, but the freezer zone has not, the baffle is closed.

1. To access the thermistor in the upper refrigerator zone, lift the bottom of the back duct cover up, then pull forward and down ([Figure 2-16](#)). Once the cover is removed, the thermistor is exposed at the bottom right rear wall, remove the clamp and disconnect the electrical connection to remove.
2. The temperature in the freezer drawer zone is uniform between both drawers, therefore only one thermistor is used. The thermistor is located behind the upper drawer in the reed switch assembly ([Figure 2-15](#)). To replace the thermistor, the complete reed switch assembly must be replaced. Simply remove the mounting screw, tilt the top of the reed switch assembly forward and disconnect the electrical connector.

CAUTION

The top drawer in the 700BR has a control cable that must be disconnected before drawer removal (See Drawer Removal Instructions).

reed switch assembly forward and disconnect the electrical connector.

NOTE: Be sure to check Troubleshooting Guide for proper thermistor testing procedures.

MODEL 700TC/I

The input temperature range in the combination refrigerator/freezer model is from 34°F to 45°F in the upper refrigerator zone, and -5°F to +5°F in the freezer drawer zone. Though the thermistor in the freezer operates the compressor, both zones can be independently temperature controlled. This is possible because the thermistor in the upper refrigerator zone (behind the back duct cover) regulates an air baffle in the sump area. If the freezer drawer zone has reached its setpoint, yet the upper refrigerator zone is warm, the compressor will

AIR Baffles
Models 700TR, 700TC/I, 700BR Only

OPERATION

A baffle will normally be closed until the corresponding zone calls for cooling.

A baffle will default to open if the corresponding thermistor is defective or unplugged.

Generally, all baffles will be closed when the compressor is off. But, if a zone is warmer than its setpoint, and the compressor cycles off, the baffle for that zone will remain open and the evaporator fan will continue to run.

All baffles will be closed during defrost and the fan delay period following a defrost.

LOCATION

MODELS 700TR, 700BR

There are two baffles attached on the left hand side of the lower air duct, one behind each drawer.

MODEL 700TC/I

There is one baffle mount assembly located at top left of the evaporator sump area (Figure 2-20).

MODELS 700TF/I, BF/I

These models have no baffles.

REMOVAL

MODELS 700TR, 700BR

1. Remove both drawer assemblies.
2. Now remove the lower mullion divider by pushing up from underneath, then remove both mullion divider supports (Figure 2-23).

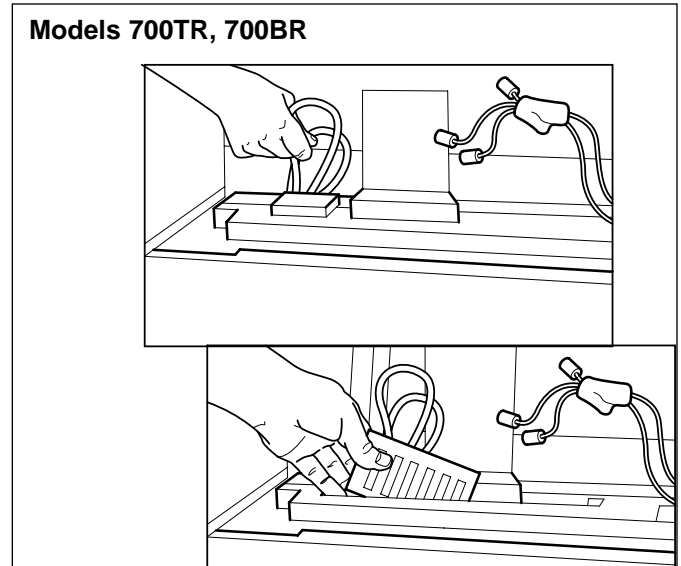


Figure 2-20. Baffle Mount Assembly

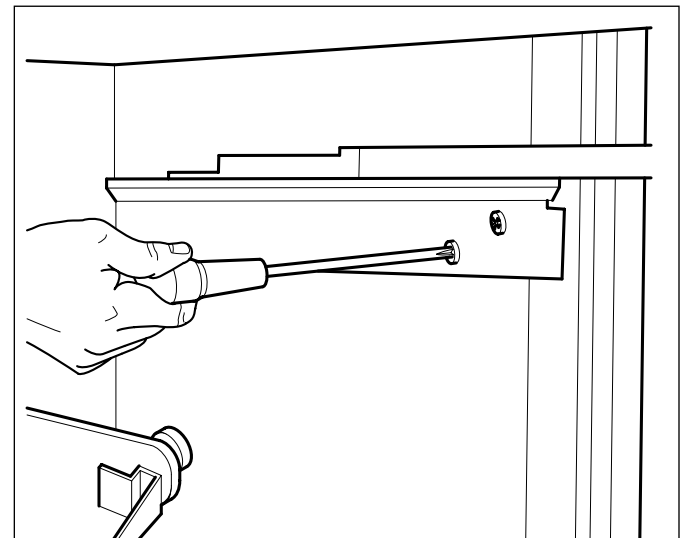


Figure 2-21. Drawer Slides

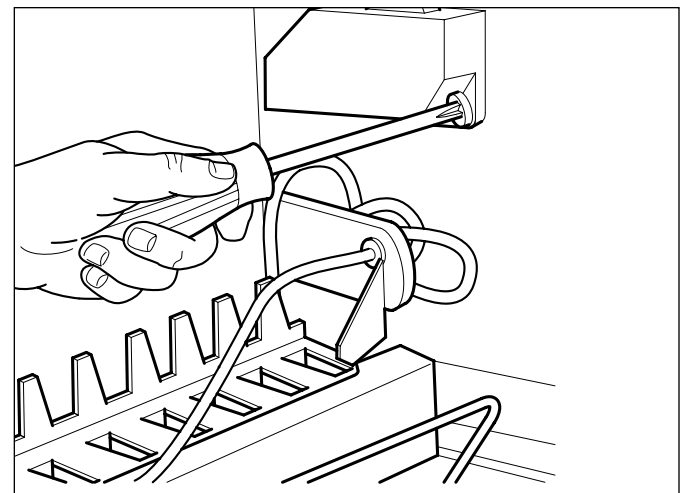


Figure 2-22. Drawer Closer

CAUTION

The top drawer in the 700BR has a control cable that must be disconnected before drawer removal (See Drawer Removal Instructions).

3. Detach all four drawer slides by removing four mounting screws (Figure 2-21).
4. Remove both drawer closers by removing two mounting screws (Figure 2-22).
5. Remove both reed switches by unscrewing the mounting screw, tilt the top of the reed switch assembly forward and disconnect the electrical connector (Figure 2-17).
6. Now remove three screws at the front and back of the evaporator cover, then remove the evaporator cover. Remove the air duct retaining screw by the bottom left corner. Pull the bottom of the air duct forward and disconnect the electrical connectors to the air baffles, then remove the air duct from the unit.

NOTE: The baffles are applied with double stick tape to the back of the air duct and will need to be pried off.

NOTE: On 700BR the cabinet harness will need to be disconnected from the air duct assembly by turning the retaining nut counterclockwise at the connector.

MODEL 700TC/I

1. Remove both drawer assemblies. Now detach all four drawer slides by removing four mounting screws (Figure 2-21).
2. Remove the icemaker if applicable.
3. Remove both drawer closers by removing two mounting screws (Figure 2-22).

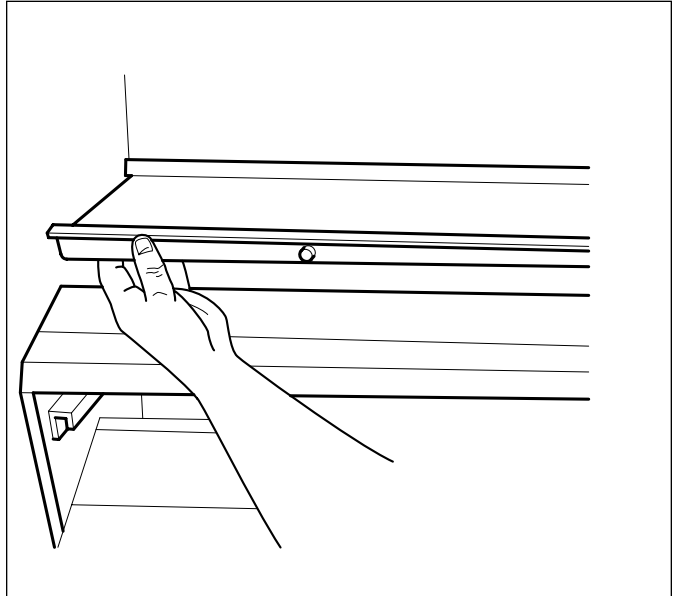


Figure 2-23. Center Divider

4. Remove both reed switches by unscrewing the mounting screw, tilt the top of the reed switch assembly forward and disconnect the electrical connector (Figure 2-17).
5. Remove three screws at the front and back of the evaporator cover, then remove the evaporator cover. Remove the air duct retaining screw by the bottom left corner. Pull the bottom of the air duct forward and remove the air duct from the unit.

The air baffle or baffle mount assembly (styrofoam block) is located at top left of the evaporator sump area (Figure 2-20). Lift the baffle mount assembly up and unplug the electrical connection.

EVAPORATOR SUMP

The evaporator sump area consists of the following components.

- Evaporator/Heat Exchanger Assembly
- Evaporator Fan Motor Assembly
- Cal Rod Defrost Heater (700TC/I, 700TF/I, 700BF/I Only)
- Defrost Terminator (700TC/I, 700TF/I, 700BF/I Only)
- Evaporator Thermistor
- Control Board Assembly (700BR, 700BF/I Only)
- Baffle Mount Assembly (700TC/I Only)

Sump Area Access

1. Remove both drawer assemblies.

⚠ CAUTION

The top drawer in the 700BR and 700 BF/I has a control cable that must be disconnected before drawer removal (See Drawer Removal Instructions).

2. Remove the lower mullion divider by pushing up from underneath (Figure 2-23), then remove both mullion divider supports (700TR & 700BR Only).
3. Remove the icemaker if applicable.
4. Detach all four drawer slides by extracting four mounting screws (Figure 2-21).
5. Remove both drawer closers by extracting two mounting screws (Figure 2-22).
6. Remove both reed switches by unscrewing the mounting screw, tilt the top of the reed switch assembly forward and disconnect the electrical connector (Figure 2-17).
7. Remove three screws at the front and back of the evaporator cover, then remove the evaporator cover. Remove the air duct retaining screw

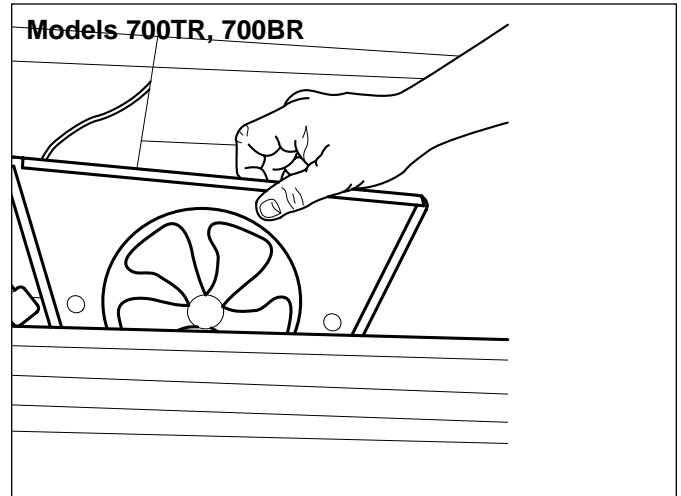


Figure 2-24. Evaporator Fan Motor Assembly

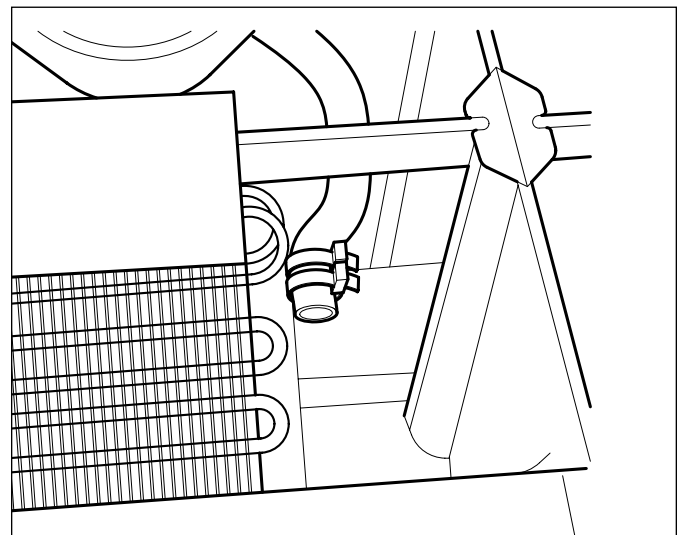


Figure 2-25. Evaporator

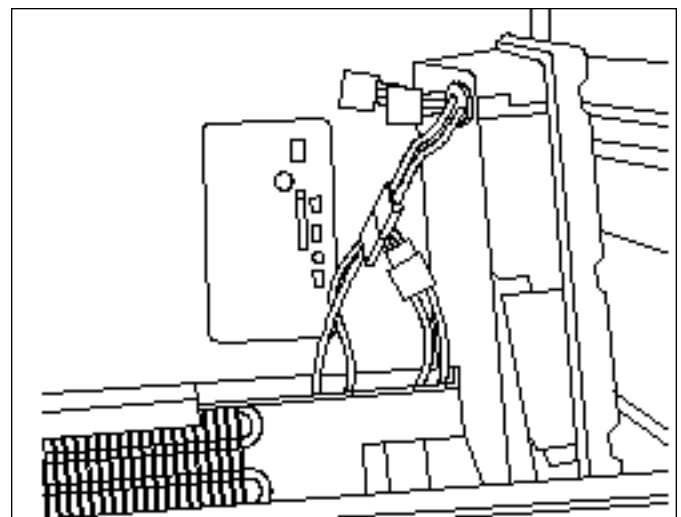


Figure 2-26. Microprocessor Assembly

by the bottom left corner. Pull the bottom of the air duct forward and disconnect the electrical connectors to the air baffles (700TR & 700BR Only), then remove the air duct from the unit.

NOTE: On 700BR & 700 BF/I the cabinet harness will need to be disconnected from the air duct assembly by turning the retaining nut counter clockwise at the Methode Connector.

Sump Component Removal

NOTE: Before attempting any service in the sump area, you must follow the steps in SUMP AREA ACCESS on the previous page.

EVAPORATOR FAN MOTOR ASSEMBLY

NOTE: On 700BR & 700 BF/I the cabinet harness will need to be disconnected from the air duct assembly by turning the retaining nut counter clockwise at the Methode Connector.

1. Disconnect electrical connector at top rear of fan motor assembly, then slide the evaporator fan motor up and out (Figure 2-24).
2. To reinstall, insert bottom of fan assembly into slot, being sure that bottom flange is secured, and that there is no play front to back.

DEFROST TERMINATOR (700TC/I, 700TF/I, 700BF/I ONLY)

Unclip terminator at right of evaporator (note loca-

tion), disconnect electrical connection and lift out.

EVAPORATOR THERMISTOR

Cut cable ties holding thermistor to evaporator (note location), disconnect electrical connection and lift out. (Figure 2-25).

CONTROL BOARD ASSEMBLY (700BR & 700BF/I ONLY)

To remove the control board assembly simply disconnect the electrical connections and slide the assembly up and out (Figure 2-26).

BAFFLE MOUNT ASSEMBLY (700 TC/I ONLY)

The baffle mount assembly (styrofoam block) is located at top left of the evaporator sump area. Lift the baffle mount assembly up and unplug the electrical connection. (Figure 2-20).

EVAPORATOR ASSEMBLY

1. Unplug evaporator fan assembly and remove.
2. Unplug defrost heater, terminator, and coil sensor/thermistor (if applicable), but **DO NOT** remove from evaporator.
3. Cut tubing to and from evaporator, at evaporator. Pull evaporator assembly up out of sump.

NOTE: Complete evaporator replacement instructions are supplied with replacement evaporator.

DEFROST SYSTEM

Models 700TC/I, TF/I, BF/I

The electronic control in the 700TC/I, TF/I, BF/I regulates defrost intervals with what is called "Adaptive Defrost." With adaptive defrost, the length of time that the heater actually stays on to defrost the evaporator and satisfy the defrost terminator is sensed by the evaporator thermistor. The length of heater ON time determines the number of hours before the next defrost. For instance, if the heater stays on for a shorter time than normal, the electronic control increases the time between the next defrost. If the heater stays on for a longer time than normal, the electronic control decreases the time between the next defrost. This is an ongoing process whereby the defrost time and the defrost interval will vary by unit use.

NOTE: To initiate a manual defrost, turn OFF master power switch for 10 seconds then turn back ON. The control will initiate defrost upon power up, provided the evaporator temperature is below 20°F. If the evaporator is warmer than 20°F, the evaporator thermistor must be disconnected before initiating defrost.

NOTE: If the evaporator thermistor fails, the electronic control will initiate defrost at 6 hour intervals and 20 minute defrost dwell. To test the evaporator thermistor, refer to Troubleshooting Guide.

Models 700TR, 700BR

Since the 700TR and 700BR do not have defrost heaters, the evaporator defrosts during the compressor off cycle. If the compartment thermistor calls for cooling, but the evaporator thermistor is not sensing temperatures greater than 40°F, the evaporator fan will be energized but the compressor will not. This ensures complete evaporator defrost. As soon as the evaporator temperature reaches 40°F, the compressor is also energized.

NOTE: If the evaporator coil is iced up and the compressor does not start, check the evaporator thermistor and replace if faulty. To test the evaporator thermistor, refer to the Trouble Shooting Guide.

LIGHTING

The 700 Series utilizes Halogen lamps for interior lighting.

Power for the lights is supplied through a 12 volt transformer, which is controlled by a 5 volt circuit through a relay on the control board. This 5 volt circuit consists of the reed switches behind each drawer, the sensor behind the control panel (700TR, 700TC/I, 700TF/I only), the microprocessor and relays on the control board. When the microprocessor senses an "open door" signal from a reed switch or the sensor behind the control panel, power is relayed to the 12 volt transformer which then supplies power to the lighting in the appropriate compartment.

If the lights in the upper compartment of the 700TR, 700TC/I, or 700TF/I get too hot, a thermal cut-out in the upper control panel will interrupt power to lighting system. The lighting system will not operate until the lights cool back down.

NOTE: There is no light terminator in the drawer area of 700 Series units.

⚠ WARNING

Halogen lamps are extremely hot! Allow lamp to cool before attempting to handle.

⚠ CAUTION

Do not touch lamp with bare hands. Oils from skin will reduce the life of the lamp. If lamp is touched with bare hands, clean lamp with denatured alcohol and wipe dry with lint free cloth.

ELECTRONIC CONTROL SUMMARY

SetPoints Available

ALL REFRIGERATOR (700TR)

- Upper Cabinet Zone Temperature Range is 34°F to 45°F.
- Upper Drawer Zone can be controlled up to 3°F colder than Upper Cabinet Zone.
- Bottom Drawer Zone can be controlled up to 3°F colder than Upper Drawer Zone.

***NOTE:** A lower zone can not be set warmer than the zone above it.*

ALL REFRIGERATOR (700BR)

- Upper Drawer Zone Temperature Range is 34°F to 45°F.
- Bottom Drawer Zone can be controlled up to 3°F colder than Upper Drawer Zone.

***NOTE:** The lower zone can not be set warmer than the upper zone.*

COMBINATION REFRIGERATOR / FREEZER (700TC/I)

- Upper Cabinet Refrigerator Zone Temperature Range is 34°F to 45°F.
- Freezer Drawer Zone Temperature Range is -5°F to +5°F.

ALL FREEZER (700TF/I, 700BF/I)

- Unit Temperature Range -5°F to +5°F

Modes Displayed

SET MODE

Pushing the "ZONE" key will activate "SET MODE". This will display the set-point and the corresponding zone indicator will flash. Temperatures can then be adjusted in that zone by pushing the "WARMER" or "COLDER" keys. To advance to the next zone, press the zone key again. The set mode will remain active for five seconds after the last key stroke.

ERROR MODE

If a zone thermistor is defective or unplugged, the corresponding zone indicator will flash and either "-20" or "55" will be displayed.

***NOTE:** To clear the error mode after a thermistor is replaced, the unit must be turned off for ten seconds, then back on.*

SHUTDOWN MODE

Attempting to set temperatures warmer than control limits causes a "SHUTDOWN MODE". In shutdown mode "--" will be displayed. All unit functions will be suspended except the lights and door alarm. To end shutdown mode, press the "COLDER" key.

Baffle Operation (700TC/I, 700BR Only)

- A baffle will normally be closed until the corresponding zone calls for cooling.
- A baffle will default to open if the corresponding thermistor is defective or unplugged.
- Generally all baffles will be closed when the compressor is off. But, if a zone is warmer than its setpoint, and the compressor cycles off, the baffle for that zone will remain open and the evaporator fan will continue to run.
- All baffles will be closed during defrost and the fan delay period following a defrost.

Compressor and Evaporator Fan Operation

***COMPRESSOR NOTE:** The thermistor in the following compartments controls the compressor.*

<u>MODEL</u>	<u>COMPARTMENT</u>
700TF	Top drawer
700TC	Top Drawer
700TR	Cabinet
700BF	Top Drawer

700BR Top Drawer

EVAPORATOR FAN NOTE: The evaporator fan is turned off when any door or drawer is opened. The fan is also off during a defrost and post-defrost period (fan delay period).

ALL REFRIGERATOR (700TR, 700BR)

When the Upper Cabinet Zone in the 700TR or the Upper Drawer Zone in the 700BR calls for cooling, the evaporator temperature is checked. If the evaporator temperature is less than 40°F the compressor remains off, but the evaporator fan is started. With the evaporator fan running the temperature of the evaporator will rise. When the evaporator temperature rises above 40°F, the compressor is started.

NOTE: A defective evaporator thermistor will result in a 10 minute fan delay before the compressor can start.

COMBINATION REFRIGERATOR / FREEZER (700TC/I)

When the freezer drawer zone calls for cooling, the evaporator fan cycles on with the compressor, except after a defrost. After a defrost the evaporator fan will not run until the evaporator temperature falls below 35°F. This is to avoid circulating warmer moist air from the evaporator condensation.

If the freezer drawer zone reaches its temperature set-point, but the upper cabinet refrigerator zone has not reached its temperature set-point, the compressor is cycled off, but the evaporator fan will continue to run.

NOTE: A defective evaporator sensor will result in a five minute fan delay before the compressor can start.

ALL FREEZER (700TF/I, 700BF/I)

The evaporator fan cycles on and off with the compressor, except after defrost. After defrost the evaporator fan will not run until the evaporator temperature falls below 35°F. This is to avoid circulating warmer moist air from the evaporator

condensation.

NOTE: A defective evaporator sensor will result in a five minute fan delay before the compressor can start.

Defrost Operation**REFRIGERATOR MODELS (700TR, 700BR)**

The 700TR and 700BR utilize an "off-cycle defrost". When the unit reaches the temperature setpoint, the compressor cycles off and the evaporator begins to defrost.

NOTE: If refrigerator runs 100% for six hours or more (due to a door left open), compressor will be turned off. This will allow for evaporator defrosting.

FREEZER MODELS (700TC/I, 700TF/I, 700BF/I)

The electronic control in the 700TC/I, 700TF/I and 700BF/I regulates defrost intervals with what is called "Adaptive Defrost". With adaptive defrost, the length of time that the heater actually stays on to defrost the evaporator, and satisfy the defrost terminator, is sensed by the evaporator thermistor. The length of heater ON time determines the number of hours before the next defrost.

MANUAL DEFROST


To initiate a manual defrost, turn OFF master power switch for 10 seconds then back ON. The control will then initiate a defrost upon power up, provided the evaporator temperature is below 20°F.

NOTE: If the evaporator is warmer than 20°F, the evaporator thermistor must be disconnected before initiating defrost.

The compressor will not cycle back on for 20 minutes (20 minute defrost dwell) if the evaporator thermistor has been disconnected (TC/I, TF/I, BFI Only).

ELECTRICAL SYSTEM OVERLAY

POWER



110V



LIGHTS

12V

MAIN BOARD
aka
CONTROL BOARD



AIR BAFFLES

18V

DOOR OPEN/
CLOSED SIGNAL

COIL TEMP



ZONE TEMP(S)

5V

KEY PAD



COMPRESSOR
HEATERS
FAN MOTORS
ICEMAKERS

110V



DISPLAY

5V

UNIT TRAY COMPARTMENT

The Unit Tray Compartment consists of the unit tray assembly, master power switch, icemaker solenoid valve (700TFI, 700TCI, 700BFI only), 12 volt transformer, and evaporator sump drain tube heater.

Unit Tray Assembly

The removable unit tray assembly was designed for easy access to the compressor, condenser, condenser fan motor, and drain pan (Figure 2-27).

To remove the unit tray assembly, extract two screws (Figure 2-28) that secure the tray to the cabinet, located at the bottom left and right corner of the cabinet. After the screws are removed, the complete tray assembly can be slid forward to expose the components.

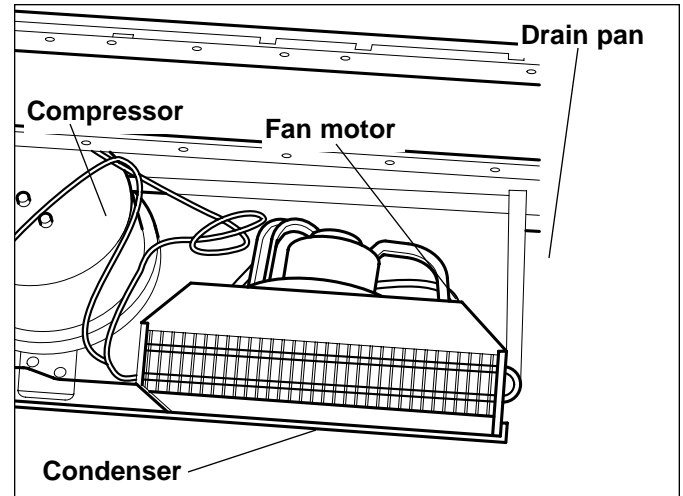


Figure 2-27. Unit Tray Assembly

<p>⚠ CAUTION</p> <p>When pulling the tray forward care must be taken to not kink any tubing or rupture any weld joints.</p>

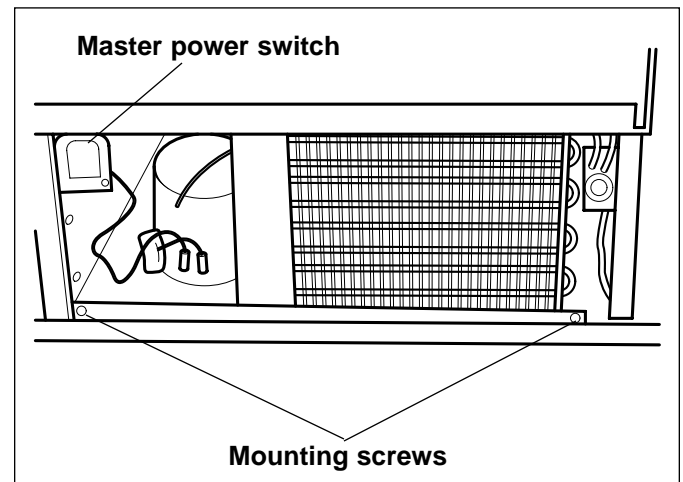


Figure 2-28. Mounting Screws

Master Power Switch

The master power switch is located at the front left of the unit tray compartment and is removed by releasing the tabs at the back of the mounting bracket, then unplugging (Figure 2-28).

NOTE: It is not necessary to slide the unit tray assembly out to access the master power switch.

Icemaker Solenoid Valve (700TFI, 700TCI, 700BFI Only)

The solenoid valve is located at the top right of the unit compartment. To remove the solenoid valve, extract the retaining screw and remove the solenoid retainer (Figure 2-29). After the retainer is removed, slide the solenoid to the left. Then pull forward slightly, unplug the electrical connectors and disconnect the water line.

NOTE: It is not necessary to slide the unit tray out to access the icemaker solenoid valve.

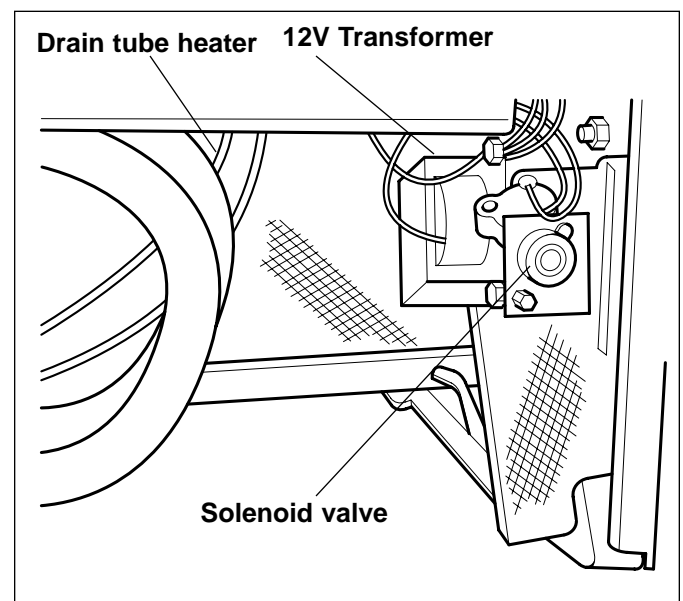


Figure 2-29. Solenoid

12-Volt Transformer



To access the transformer, slide the unit tray assembly out, then locate the transformer at the upper right side behind the water valve (if applicable). To remove the transformer, first remove two nuts, one in front and one in back of the transformer (Figure 2-29), then disconnect the electrical connection.

Evaporator Sump Drain Tube Heater

To access the drain tube heater, the unit tray assembly must be slid out. The drain tube heater is located in the unit tray area at the bottom of the evaporator sump (Figure 2-29). To remove the drain tube heater, pull it out of the sump drain tube, then disconnect the electrical connection located at the upper rear of the unit compartment.

NOTE: When replacing the drain tube heater, it is necessary to feed the heater in through the drain tube, under the evaporator, approximately seven inches.

AIR FLOW

NOTE: In all the following air flow illustrations the white arrow  signifies Pushed Air, while the shaded arrow  signifies Returned Air.

Model 700TR (Figure 3-1)

The temperature for each compartment, or zone, in the 700TR can be independently controlled (up to 3°F colder than the zone above it) by the air baffle/duct divider system. Depending on the different zone requirements, the air baffles in each zone open and close as needed.

Air to the *bottom drawer zone* is directed behind the lower air duct, up the left side and through the air baffle behind the bottom drawer. The air then returns to the evaporator sump area through the vents in the evaporator cover.

Air to the *upper drawer zone* is directed behind the lower air duct, up the left side and through the air baffle behind the upper drawer. Air then returns through an opening in the lower air duct (at bottom right of upper drawer zone), back down behind the right side of the lower air duct to the evaporator sump area.

Air to the *top refrigerator zone* is directed behind the lower air duct, up the left side and continues up behind the upper duct in the top refrigerator zone where it is forced out at the top. The air then returns through an opening at the bottom right hand corner of the top duct, back down behind the right side of the lower air duct to the evaporator sump area.

Model 700TC/I (Figure 3-2)

The *freezer zone* has two vertical duct dividers behind the lower rear duct which separate the air to the refrigerator from air to the freezer.

Air to the *refrigerator zone* is directed through a baffle in the left side of evaporator sump area, then ducted up the left side to the refrigerator compart-

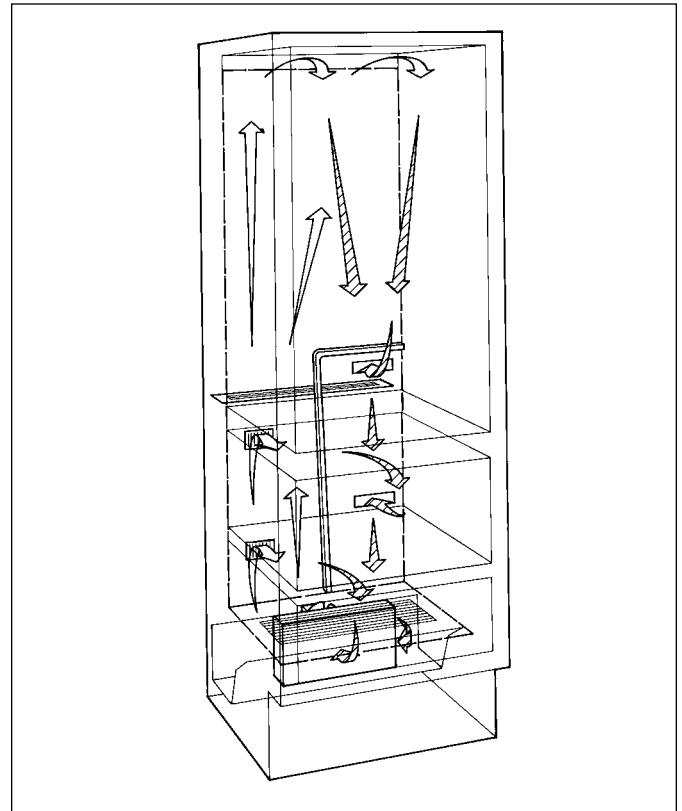


Figure 3-1. Model 700TR Air Flow

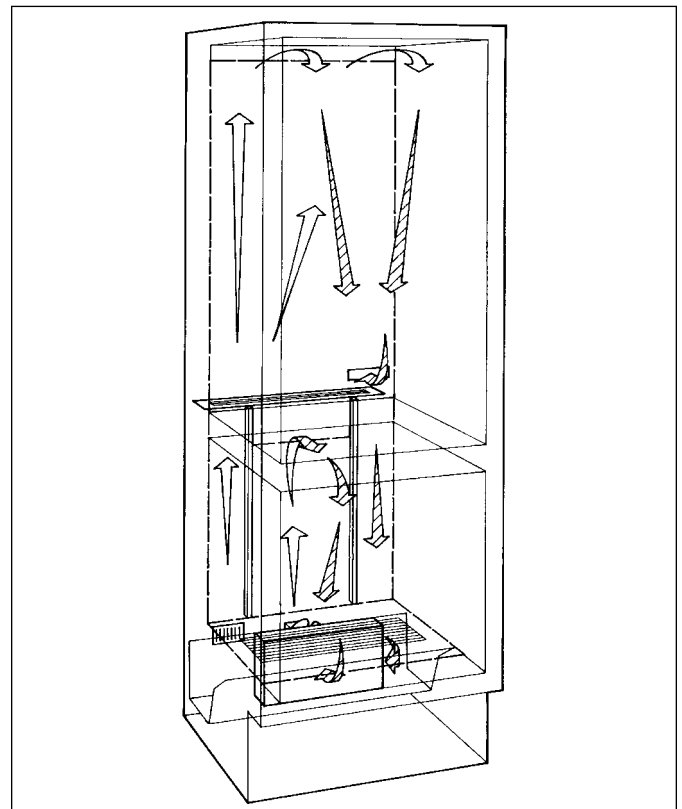


Figure 3-2. Model 700TC/I Air Flow

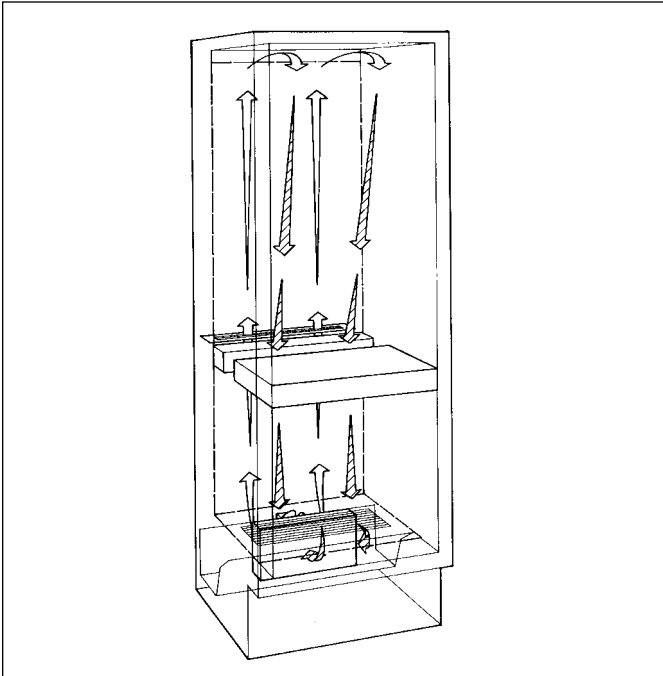


Figure 3-3. Model 700TF/I Air Flow

ment. Air travels up behind the back duct in the refrigerator compartment and is forced out at the top. Air then returns through an opening at the bottom right hand corner of the top duct, back down behind the right side of the lower air duct, to the evaporator sump area.



Air to the *lower freezer zone* travels up behind the center of the lower air duct, between the two vertical duct dividers. Air is then forced out at the top of the freezer compartment and returns to the evaporator sump area through the vents in the evaporator cover.

Model 700TF/I (Figure 3-3)

Air travels up behind the lower air duct and then behind the upper air duct where it is forced out at the top in the *upper freezer zone*. The air drops to the *lower freezer zone* through the mullion wall vent between the upper and lower compartments. Then the air returns to the evaporator sump area through the vents in the evaporator cover.

Model 700BR (Figure 3-4)

Air to the upper drawer zone travels up behind the left hand side of the rear duct and is forced out at

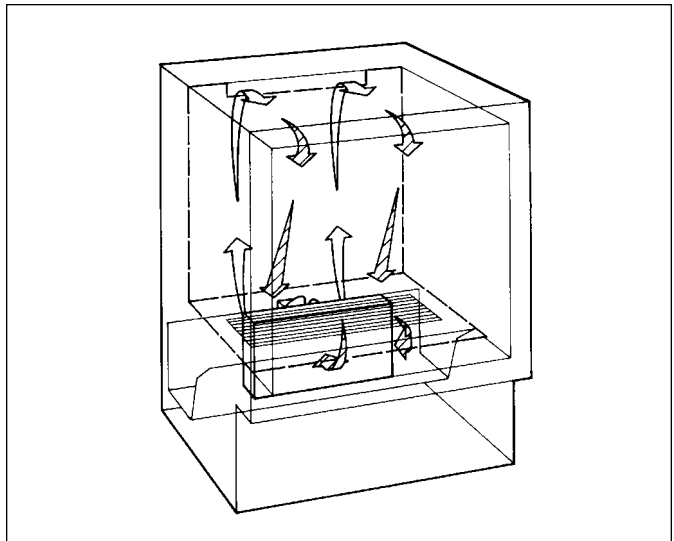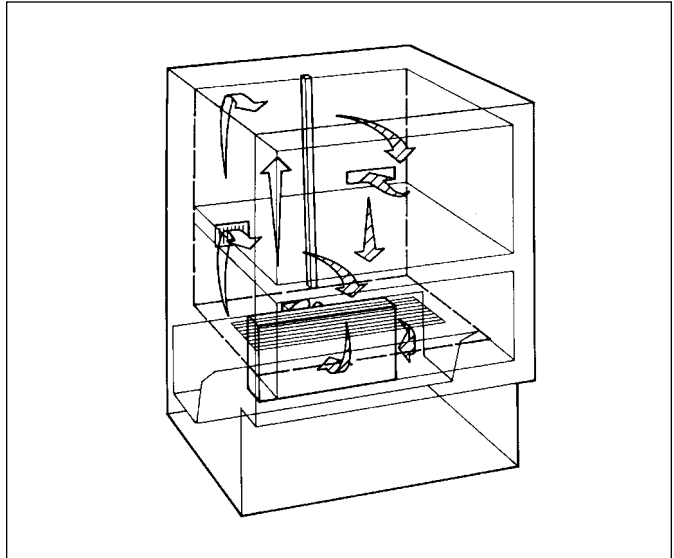

the top. Air is then returned to the sump area, through the opening at the bottom right of the upper drawer zone.

Air to the lower drawer zone travels up behind the left hand side of the rear duct where the air baffle opens and closes as needed. The air then returns to the sump area through the evaporator cover.

Model 700BF/I (Figure 3-5)

Air travels up behind the air duct and is then forced out at the top of the *freezer zone*. The air then returns to the evaporator sump area through

GENERAL TROUBLESHOOTING GUIDE

Complaint	Possible Cause	Correction
<p>Warm compartment temperatures.</p> <p><i>Questions:</i></p> <p><i>What are zone temperatures and setpoints?</i></p> <p><i>Is zone indicator flashing?</i></p> <p><i>Is compressor running?</i></p> <p><i>Is door alarm beeping with door shut?</i></p> <p><i>Is condenser dirty?</i></p>	<p>Electronic Control function.</p> <ol style="list-style-type: none"> Control shut off. Control setpoint is too warm. Zone thermistor malfunction. <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px 0;"> <p>⚠ CAUTION! Low voltage. DO NOT apply 115 volts.</p> </div> <p>NOTE: If a thermistor is unplugged or replaced, the unit must be turned OFF at the master power switch, then back ON to clear the error mode.</p>	<ol style="list-style-type: none"> If "--" is displayed, unit is off. Press "COLDER" key to start the unit. Press "ZONE" key to check setpoints. Zone indicator will flash. Displayed temperature is now the setpoint. Set zone(s) to colder temperature(s). If "-20-" is displayed with zone indicator flashing, thermistor in that zone is unplugged or faulty. Repair wiring or replace thermistor. If "-55-" is displayed with zone indicator flashing, thermistor in that zone is shorted. Repair wiring or replace thermistor. <p>NOTE: Resistance of thermistor should be approximately 32500 ohms at 32°F, 10000 ohms at 77°F.</p>
	<p>Insufficient condenser air,</p> <ol style="list-style-type: none"> Clogged condenser. Condenser fan obstructed or faulty. Kickplate/grille restricted. 	<ol style="list-style-type: none"> Clean condenser and instruct customer. Check condenser fan, clear obstruction or replace. Remove restriction.
	<p>Door/drawer air leak.</p> <ol style="list-style-type: none"> Food obstructing door/drawer closing. Door/drawer gasket twisted or torn. Door hinge binding (700TR, 700TC/I, 700TF/I only). Drawer close tripped backwards. 	<ol style="list-style-type: none"> Remove obstruction. Repair or replace gasket. See DOOR CLOSING CHECK AND REPAIR PROCEDURES at end of Troubleshooting Guide. Trip drawer closer forward.
	<p>Poor air ducting.</p> <ol style="list-style-type: none"> Air leakage past vertical duct dividers. Air duct restriction. 	<ol style="list-style-type: none"> See TC/I Air Seals at the end of Troubleshooting Guide. Adjust vertical duct divider(s) and/or remove blockage.

GENERAL TROUBLESHOOTING GUIDE

Complaint	Possible Cause	Correction
<p>Warm compartment temperatures (continued).</p>	<p style="text-align: center;">Incomplete defrost Poor evaporator air flow.</p> <p>NOTE: To initiate a manual defrost, see defrost section at front of Troubleshooting Guide.</p> <ol style="list-style-type: none"> 1. Faulty door sensor (700 TC/I, 700TF/I only), or faulty reed switch (all models). 2. Evaporator fan faulty. 3. Evaporator fan blade obstructed. 4. Defrost terminator faulty. 5. Defrost heater faulty. 6. Evaporator thermistor faulty. <div style="border: 1px solid black; padding: 2px; margin: 5px 0;"> <p>⚠ CAUTION! Low voltage. DO NOT apply 115 volts.</p> </div> <p>NOTE: Evaporator thermistor terminates defrost at 52°F (700TC/I, 700TF/I, 700BF/I only).</p> 7. Evaporator sump drain tube blocked. 8. Drain tube heater faulty (700TC/I, 700TF/I, 700BF/I only). 	<ol style="list-style-type: none"> 1. With door shut and reed switches depressed, check for 115V across P7 & P5 at control board. If 115V is present, repair wiring at door sensor or reed switch, or replace door sensor or reed switch. 2. With door shut and reed switches depressed, check for 115V across P9 & P5 at control board. If no 115V, repair wiring at evaporator fan or replace evaporator fan. 3. Clear obstruction. 4. Check wiring to terminator, then check terminator resistance. If the evaporator is below 30°F, terminator should be closed. If above 70°F, it should be open. Repair wiring or replace terminator if faulty. 5. Check for power to heater, then check resistance of heater. Resistance should be 20-30 ohms. Repair wiring or replace evaporator assy. 6. Check wiring and resistance of evaporator thermistor. Resistance should be approximately 32500 ohms at 32°F, 10000 ohms at 77°F. Repair wiring or replace evaporator thermistor. <p>NOTE: For models 700TC/I, 700TF/I, 700BF/I prior to serial #1201766, remove evaporator thermistor. This will defrost evaporator every 6 hours of compressor run time with a 20 minute dwell.</p> 7. Clear foreign material from drain tube. 8. Check wiring and resistance of drain tube heater. Resistance should be 1900 ohms. Repair wiring or replace.

GENERAL TROUBLESHOOTING GUIDE

Complaint	Possible Cause	Correction
Warm compartment temperature (continued).	<p>Poor Air Baffle operation 700TR, 700TC/I, 700BR only.</p> <ol style="list-style-type: none"> Air baffle obstruction. Air baffle faulty. <div style="border: 1px solid black; padding: 5px; width: fit-content;"> <p>⚠ CAUTION! Low voltage. DO NOT apply 115 volts.</p> </div>	<ol style="list-style-type: none"> Clean foreign material from baffle so it slides freely. At control board, with baffle harness disconnected from P4, check resistance of baffle coils (2 per baffle). Resistance across any two leads of baffle should be between 5-25 ohms. (See wiring diagram for unit being serviced.) If resistance is outside range, repair wiring or replace baffle.
	<p>Sealed system issue.</p>	<p>See SEALED SYSTEM TROUBLESHOOTING GUIDE.</p>
Compartment temperature too cold.	<p>Electronic Control function.</p> <ol style="list-style-type: none"> Control set too cold. Zone thermistor shorted. <div style="border: 1px solid black; padding: 5px; width: fit-content;"> <p>⚠ CAUTION! Low voltage. DO NOT apply 115 volts.</p> </div> <p>NOTE: If a thermistor is unplugged or replaced, the unit must be turned OFF at the master power switch, then turned back ON to clear the error mode.</p>	<ol style="list-style-type: none"> Press “ZONE” key to check setpoints. Zone indicator will flash. Displayed temperature is now the setpoint. Set zone(s) to warmer temperature(s). If “-55-” is displayed with zone indicator flashing, thermistor in that zone is shorted. Repair wiring or replace thermistor. <p>NOTE: Resistance of thermistor should be approximately 32500 ohms at 32°F, 10000 ohms at 77°F.</p>
	<p>Poor air ducting.</p> <ol style="list-style-type: none"> Air leakage past vertical duct dividers. Air duct restriction. 	<ol style="list-style-type: none"> See TC/I Air Seals at end of Troubleshooting Guide. Adjust vertical duct divider(s) and/or remove blockage.
Lighting inoperative. <i>Questions:</i> <i>Are the lights out?</i> <i>Is door alarm beeping with door shut?</i>	<p>Halogen lamp(s) faulty.</p> <ol style="list-style-type: none"> Lamp(s) burnt out. <div style="border: 1px solid black; padding: 5px; width: fit-content;"> <p>⚠ CAUTION! Lamps very hot. Allow to cool before inspecting.</p> </div>	<ol style="list-style-type: none"> Visually inspect the lamp(s) for signs of burn-out and replace if required.

GENERAL TROUBLESHOOTING GUIDE

Complaint	Possible Cause	Correction
Lighting inoperative (continued). <div style="border: 1px solid black; padding: 5px; width: fit-content;"> ⚠ CAUTION! Low voltage. DO NOT apply 115 volts. </div>	<p>Poor door closing 700TR, 700TC/I, 700TF/I only.</p> <ol style="list-style-type: none"> 1. Food obstructing door closing. 2. Door hinge binding, door not closing. 	<ol style="list-style-type: none"> 1. Remove obstruction. 2. See DOOR CLOSING CHECK AND REPAIR at end of Troubleshooting Guide.
	<p>Poor drawer reed switch operation.</p> <ol style="list-style-type: none"> 1. Reed switch stuck closed. <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-left: 20px;"> ⚠ CAUTION! Low voltage. DO NOT apply 115 volts. </div> 2. Reed switch unplugged or faulty. 	<ol style="list-style-type: none"> 1. Verify that reed switch actuator extends forward when drawer opens, if not, replace reed switch assy. 2. With door shut and reed switches depressed, check resistance of harness at P2 of control panel. If open, repair wiring or replace reed switch assy.
	<p>Upper control panel assy. component malfunction 700TR, 700TC/I, 700TF/I only.</p> <ol style="list-style-type: none"> 1. Thermal cut-out faulty. 2. Interlock switch faulty. 	<ol style="list-style-type: none"> 1. Cut power at master power switch. Then, at upper control panel, check resistance across thermal cut-out. If open, replace upper control panel assy. NOTE: Thermal cut-out must be cool. 2. Cut power at master power switch. Then, at upper control panel, check resistance across interlock switch while interlock switch depressed. If open, replace upper control panel assy.
	<p>Light transformer malfunction.</p> <ol style="list-style-type: none"> 1. Transformer primary winding faulty. 2. Transformer secondary winding faulty. 	<ol style="list-style-type: none"> 1. Cut power at master power switch. Then check resistance across orange and white wires at P7 & P5. If open, repair wiring or replace transformer and control board. 2. 700TR, 700TC/I, 700TF/I only. Restore power to unit and check the transformer secondary winding for 15V across P11 and the pink wire in the control board area. If no 15V, repair wiring or replace transformer.

GENERAL TROUBLESHOOTING GUIDE

Complaint	Possible Cause	Correction
Lighting inoperative (continued). <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> ⚠ CAUTION! Low voltage. DO NOT apply 115 volts. </div>	2. Transformer secondary winding faulty (continued). Control board faulty.	2. 700BR, 700BF/I only. Check the transformer secondary winding for 15VAC at any light socket. If no 15VAC, repair wiring or replace transformer. Check for 115V across P6 & P5 at control board. If no 115V, check wiring to unit and to control board. Repair if faulty.
Lighting ON with doors and drawers shut. Door alarm keeps beeping. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> ⚠ CAUTION! Low voltage. DO NOT apply 115 volts. </div>	Faulty door sensor/reed switch. 1. Faulty door sensor (700TR, 700TC/I, 700TF/I only), or faulty reed switch (all models).	1. With door shut and reed switches depressed, check for 115V across P7 & P5 at control board. If 115V is present, repair wiring at door sensor or reed switch, or replace door sensor or reed switch.
Display problems: 1. "--" on LCD. 2. "-20" on LCD and indicator flashing. 3. "55" on LCD and indicator flashing. 4. "Su" on LCD and top lights off. 5. "-88" on LCD, top lights off and keys inoperative. 6. Top lights off and keys inoperative.	1. Control is shut off. 2. Zone thermistor malfunction. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> ⚠ CAUTION! Low voltage. DO NOT apply 115 volts. </div> <p style="color: green; margin-top: 10px;">NOTE: If a thermistor is unplugged or replaced, the unit must be turned OFF at the master power switch, then turned back ON to clear the error mode.</p> 3. Zone thermistor malfunction. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> ⚠ CAUTION! Low voltage. DO NOT apply 115 volts. </div> <p style="color: green; margin-top: 10px;">NOTE: If a thermistor is unplugged or replaced, the unit must be turned OFF at the master power switch, then turned back ON to clear the error mode.</p> 4. Blue wire of display cable is unhooked or faulty. 5. Red wire of display cable is unhooked or faulty. 6. Black, white, or yellow wire of display cable is unhooked or faulty.	1. Unit is OFF. Press COLDER key to start unit. 2. Thermistor in indicated zone is unplugged or faulty. Repair wiring or replace thermistor. <p style="color: green; margin-top: 10px;">NOTE: Resistance of thermistor should be approximately 32500 ohms at 32°F, 10000 ohms at 77°F.</p> 3. Thermistor in indicated zone is shorted. Repair wiring or replace thermistor. 4. Repair wiring. 5. Repair wiring. 6. Repair wiring.

GENERAL TROUBLESHOOTING GUIDE

Complaint	Possible Cause	Correction
Display problems(continued): 7. Segment of a number missing on LCD. 8. LCD off, unit running. 9. LCD too dark (700BR, 700BF/I only).	7. LCD faulty. 8. Display cable is unhooked or faulty. 9. Normal. There is no lighting behind LCD of 700BR or 700BF/I (see CORRECTION for units prior to serial #1257640).	7. Replace control panel assy. 8. Repair wiring. 9. If 700BR or 700BF/I was manufactured prior to serial #1257640, replace control panel assy.
Door alarm on with doors and drawers shut.	Faulty door sensor/reed switch. 1. Faulty door sensor (700TR, 700TC/I only), or faulty reed switch (all models).	1. With door and reed switches depressed, check for 115V across P7 & P5 at control board. If 115V is present, repair wiring at door sensor or reed switch, or replace door sensor or reed switch.
Door alarm reactivates itself.	Power outage. 1. Alarm defaults to ON after a power outage or voltage spike.	1. Press ALARM key.
Door/drawer not closing.	Poor door/drawer operation. 1. Food obstructing door/drawer closing. 2. Door/drawer gasket twisted or torn. 3. Door hinge binding (700 TR, 700TC/I, 700TF/I only). 4. Drawer close tripped backwards. 5. Drawer not engaging slide locating pins.	1. Remove obstruction. 2. Repair or replace gasket. 3. See DOOR CLOSING CHECK AND REPAIR at end of Troubleshooting Guide. 4. Trip drawer closer forward. 5. Pull slide forward, lining up holes in drawer with locating pins on slides.
Internal moisture. <i>Questions:</i> <i>Where is the moisture?</i> <i>What are ambient conditions?</i>	Air infiltration/high humidity. 1. Door/drawer not closing. 2. Frequent door openings. 3. High relative humidity.	1. See DOOR/DRAWER NOT CLOSING above. 2. Instruct customer. 3. Instruct customer.

GENERAL TROUBLESHOOTING GUIDE

Complaint	Possible Cause	Correction
<p>External moisture.</p> <p><i>Questions:</i></p> <p><i>Where is the moisture?</i></p> <p><i>What are the ambient conditions?</i></p> <p><i>Are two units installed side-by-side?</i></p>	<p>Air infiltration/high humidity.</p> <ol style="list-style-type: none"> 1. Door/drawer not closing. 2. High usage. 3. High relative humidity. 4. Dual unit install package not used or faulty. 	<ol style="list-style-type: none"> 1. See DOOR/DRAWER NOT CLOSING above. 2. Instruct customer. 3. Instruct customer. 4. Check for dual unit install package. If present, check for 115V at wire harness by compressor. If no 115V, repair wiring. If 115V is present, check resistance of heater (263-313 ohms tall unit heater, 540-640 ohms base unit heater). If resistance is outside range, repair wiring or replace heater.
<p>No ice.</p>	<p>Inoperative or faulty icemaker system.</p> <ol style="list-style-type: none"> 1. No water line run to unit. 2. Ice maker system shut off. 3. Freezer too warm. 4. Jammed ice cube. 5. Ice bucket out of position. 6. Icemaker/drawer switch faulty. 7. Ice maker faulty. 	<ol style="list-style-type: none"> 1. Instruct customer to contact plumber. 2. Press ICE key. 3. Press COLDER key. 4. Remove jammed cube. 5. Make sure ice bucket depresses ice maker/drawer switch below icemaker when drawer closes. 6. Check resistance of icemaker/drawer switch with switch depressed. If open while depressed, replace switch. If switch is OK, check and repair wiring. 7. See ICEMAKER TROUBLESHOOTING GUIDE.

700 SERIES DOOR CLOSING CHECK AND REPAIR PROCEDURES

TOP DOOR HINGE:

- 1: Open door approximately 1", then let door go to see if it closes on its own. Repeat this three times.
- 2: If door fails to close, remove the top hinge cover from the top hinge arm, and remove the one top door hinge screw closest to the pivot point of the hinge. Then loosen the three remaining top door hinge screws almost all the way out.
- 3: Open door approximately 1", then let door go to see if it closes on its own. Repeat this three times.

4: If door closes all three times, install 700 Series Top Hinge Shims Package, part #4202290.

- 5: If door fails to close, remove the three remaining screws from the top door hinge and check the closing action of the hinge on its own. If it seems weak, replace it.

BOTTOM DOOR HINGE:

- 1: Open door approximately 1", then let door go to see if it closes on its own. Repeat this three times.
- 2: If door fails to close, remove the bottom hinge cover from the bottom hinge arm, and remove all bottom door hinge screws. Then check the closing action of the hinge on its own. If it seems weak, replace it.

700TC/I AIR SEALS

If Refrigerator Section Is Too Warm

- Make sure upper air duct is positioned in slot of transition duct. If not, reposition upper air duct (see #1, Figure 5-1).
- Check that all foam blocks are in position at top of transition duct, and are making a good seal against upper air duct (see #2, Figure 5-1). Reposition foam blocks as required, or order Foam Tape (3/4" x 1/8"), part no. 6230730, and apply to top of blocks.
- Make sure return air duct is not blocked by ice or frost (#3). Replace if defective with part no. 3013550.
- Check that right rear sump baffle is positioned tightly against back of sump (#4). Reposition baffle assembly if required and/or apply a bead of silicone sealant where baffle meets back of sump.
- Make sure evaporator fan assembly is correctly positioned with no play front to back (#5). Reposition if required.
- Check baffle operation by clenching refrigerator thermistor firmly in one hand to warm it. The baffle should open after 1-2 minutes.

If Refrigerator Section Is Too Cold

- Check that all foam blocks are in position at top of transition duct, and are making a good seal against upper air duct (see #2, Figure 5-1). Reposition foam blocks as required, or order Foam Tape (3/4" x 1/8"), part no. 6230730, and apply to top of blocks.
- Make sure the lower air duct is firmly against back wall and vertical duct dividers (#6). If not, tighten lower duct mounting screw and/or reposition vertical duct dividers and/or order Foam Tape (3/4" x 1/8"), part no. 6230730, and apply to top of vertical duct dividers and along side of flange of lower air duct.

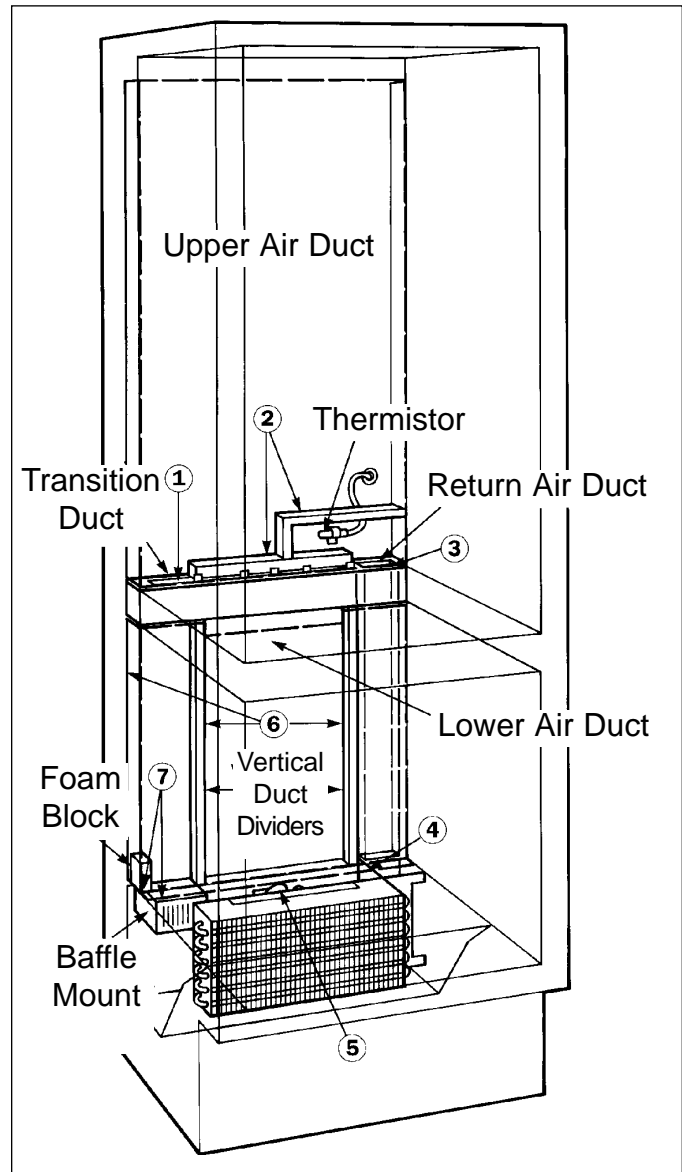


Figure 5-1. 700TC/I Air Seals

- Check that the baffle mount assembly is positioned firmly against bottom flange of air duct and foam block inside left corner of air duct. If necessary, reposition baffle mount assembly and/or order Foam Tape (3/4" x 1/8"), part no. 6230730, and apply to top of baffle mount assembly.
- Check baffle operation by placing refrigerator thermistor in a glass of ice water. The baffle should close after 1-2 minutes.

SEALED SYSTEM TROUBLESHOOTING GUIDE

Operating System Pressures				
MODEL	70°F AMBIENT		90°F AMBIENT	
	LOW SIDE	HIGH SIDE	LOW SIDE	HIGH SIDE
700TR	8 to 18	85 to 95	9 to 19	105 to 115
700 TC/I	-2 to 2	75 to 85	-1 to 3	115 to 120
700TF/I	-2 to 2	80 to 90	-2 to 2	115 to 120
700BR	10 to 20	70 to 80	10 to 20	110 to 120
700 BF/I	-3 to 2	80 to 90	-2 to 3	110 to 120

Complaint	Possible Cause	Correction
<p>Compressor runs excessive amount.</p> <p>Questions:</p> <p><i>Is ambient temperature high?</i></p> <p><i>What is displayed on LCD?</i></p> <p><i>Are doors closing and sealing properly.</i></p> <p><i>When was condenser last cleaned?</i></p>	<p>Usage issue.</p> <ol style="list-style-type: none"> 1. High ambient temperature. 2. Excessive door openings. 	<ol style="list-style-type: none"> 1. Allow unit to adjust or ambient temperatures to decrease. 2. Allow unit to pull down to temperature with door closed.
	<p>Insufficient condenser air flow.</p> <ol style="list-style-type: none"> 1. Clogged condenser. 2. Condenser fan obstructed or defective. 	<ol style="list-style-type: none"> 1. Clean condenser and instruct customer. 2. Check condenser fan; clear obstruction or replace if faulty.

SEALED SYSTEM TROUBLESHOOTING GUIDE

Complaint	Possible Cause	Correction
Compressor runs excessive amount (continued).	Kickplate/grille restricted.	Remove restriction.
	Sealed system leak or low charge.	Check sealed system operating pressures. If low side and high side pressures are low, locate leak, flush system and repair or replace part. If leak is on low side, replace compressor and drier also. See OPERATING PRESSURES at beginning of Sealed System Troubleshooting Guide.
	Sealed system high side restriction.	Check sealed system operating pressures. If low side pressure is low, and high side pressure is high, locate high side restriction (crimped tubing, etc.) and repair. If restriction caused by low side leak allowing moisture into system, locate leak, flush system and repair or replace part. Replace compressor and drier also. See OPERATING PRESSURES at beginning of Sealed System Troubleshooting Guide.
	Inefficient compressor.	Check sealed system operating pressures. If low side pressure is high, and high side pressure is low, replace compressor. See OPERATING PRESSURES at beginning of Sealed System Troubleshooting Guide.
Compressor runs, but not cooling.	See COMPRESSOR RUNS EXCESSIVE AMOUNT.	See COMPRESSOR RUNS EXCESSIVE AMOUNT.
Compressor kicks out on overload. <i>Questions:</i> <i>When was condenser last cleaned?</i>	Insufficient condenser air flow. 1. Clogged condenser. 2. Condenser fan obstructed or faulty. 3. Kickplate/grille restricted.	1. Clean condenser and instruct customer. 2. Check condenser fan, clear obstruction or replace if faulty. 3. Remove restriction.

SEALED SYSTEM TROUBLESHOOTING GUIDE

Complaint	Possible Cause	Correction
Compressor kicks out on overload (continued).	<p>Compressor malfunction.</p> <ol style="list-style-type: none"> Relay and/or overload faulty. Compressor rotor locked. 	<ol style="list-style-type: none"> Use a starting cord to start compressor direct. If compressor starts, replace relay and overload. Use a starting cord to start compressor direct. If compressor does not start, replace compressor. <p>NOTE: If compressor has just cycled off, pressures will need to equalize before compressor will start.</p>
	<p>Sealed system overcharge.</p>	<p>Check sealed system operating pressures. If low side and high side pressures are high, evacuate system and recharge.</p> <p>See OPERATING PRESSURES at front of Sealed System Troubleshooting Guide.</p>
	<p>Heat exchanger separated.</p> <div style="border: 1px solid black; padding: 5px; margin: 5px 0;"> <p>⚠ CAUTION! Line voltage must be between 105VAC to 125VAC. Improper line voltage could cause compressor to overheat.</p> </div>	<p>Check for 115V across P6 & P5 at control board. If voltage is outside of range (105VAC to 125VAC), have line voltage corrected.</p>
Compressor will not start.	<p>Compressor malfunction.</p> <ol style="list-style-type: none"> Relay and/or overload faulty. Compressor rotor locked. 	<ol style="list-style-type: none"> Use a starting cord to start compressor direct. If compressor starts, replace relay and overload. Use a starting cord to start compressor direct. If compressor does not start, replace compressor. <p>NOTE: If compressor has just cycled off, pressures will need to equalize before compressor will start.</p>

ICEMAKER TROUBLESHOOTING GUIDE

⚠ WARNING! Disconnect power to icemaker before attempting repairs.

⚠ CAUTION! Do not attempt to jump start the icemaker through any ports other than "T" & "H". Probing the other ports while the unit is powered may cause the icemaker to short out.

Note: For detailed information on the modular icemaker, see the Icemaker Service Manual.

Complaint	Possible Cause	Correction
No ice/low ice production	1. Freezer not cold enough.	1. See GENERAL TROUBLESHOOTING GUIDE .
	<p style="text-align: center;">2:00 ejector position (PARK):</p> 1. No run when jumped between "T" & "H" ports. 2. Open thermostat. 3. No power to icemaker. 4. Jammed cube. 5. Little or no water to icemaker. 5a. Frozen fill tube (check/replace water valve, inoperative fill tube heater). 5b. Kinked water line between water valve & fill tube. 5c. Water line to unit obstructed. 5d. Clogged screen in water valve. 5e. No power to water valve. 5f. Low water pressure (must be between 20 - 120 psi). NOTE: jump between "T" & "H" ports for 10 seconds. Remove jumper & catch water. Should be 130cc's. 5g. High water pressure (must be between 20-120 psi). 5h. Open heater circuit (ports "L" & "H" = 72 ohms). 5i. Closed thermostat.	1. Replace icemaker modular head. 2. Check/replace thermostat (apply fresh alumilastic). 3. Trace power, repair wiring. 4. Unjam cube and check fill cup and fill alignment tube. 5a. Check/replace water valve, check/replace fill tube heater or repair wiring. 5b. Un-kink water line or replace. 5c. Clear obstruction. 5d. Replace water valve. 5e. Trace power, check wiring, repair wiring. 5f. Increase supply water pressure. 5g. Decrease supply water pressure. 5h. Replace mold and heater assembly. 5i. Check/replace thermostat (apply fresh alumilastic).

ICEMAKER TROUBLESHOOTING GUIDE

Complaint	Possible Cause	Correction
No ice/low ice production (continued)	5j. Damaged heater or thermostat tulips on module. 5k. Heater pins too short, not contacting module. 6. Ice level locked in UP position. 7. Ice level arm binds. 7a. Ice in actuator/ice level arm hole. 7b. Housing hole small or burred. 7c. Actuator O.D. large or burred. 7d. Module housing damaged. 7e. Ice level arm misformed. 7f. Hole in fill cup small, misformed or burred. 8. Little or no alumilastic on thermostat. 9. Module not properly secured to housing. 10. Heater not staked into mold completely. 11. Wrong heater voltage. 12. Broken cam follower.	5j. Replace icemaker modular head. 5k. Replace mold and heater assembly. 6. Lower ice level arm. 7a. Remove module, clear ice from hole and dry housing. 7b. De-burr hole or replace icemaker. 7c. Replace icemaker modular head. 7d. Replace icemaker modular head. 7e. Replace ice level arm. 7f. Clear burrs or replace fill cup. 8. Apply fresh alumilastic. 9. Tighten screws (20-26 in/lbs). 10. Replace mold and heater assembly. 11. Replace mold and heater assembly. 12. Replace icemaker modular head.
	<p style="text-align: center;">3:00 ejector position:</p> 1. No run when jumped between "T" & "H" ports. 2. Jammed cube. 3. Icemaker and/or unit not level. 4. No power to icemaker. 5. Excessive water fill volume. 6. Cubes fell back on mold during eject.	1. Replace icemaker modular head. 2. Unjam cube and check fill cup and fill tube alignment. 3. Level as necessary. 4. Trace power, repair wiring. 5. Adjust water fill, or replace water valve, or decrease supply water pressure. 6. Check fill cup and fill tube alignment.
	<p style="text-align: center;">4:00 ejector position:</p> 1. Thermostat out of calibration.	1. Replace thermostat (apply fresh alumilastic).

ICEMAKER TROUBLESHOOTING GUIDE

Complaint	Possible Cause	Correction
No ice/low ice production (continued)	2. Open heater circuit (module gear should be turning). 3. Heater not staked into mold completely. 4. Broken cam follower.	2. Replace mold and heater assembly. 3. Replace mold and heater assembly. 4. Replace icemaker modular head.
	<p style="text-align: center;">6:00 ejector position:</p> 1. No run when jumped between “T” & “H” ports. 2. Hollow cubes. 3. Insufficient water volume to icemaker.	1. Replace icemaker modular head. 2. See HOLLOW CUBES below. 3. See LITTLE OR NO WATER TO ICE-MAKER above.
	<p style="text-align: center;">7:30 ejector position:</p> 1. No run when jumped between “T” & “H” ports. 2. Ice level arm stuck in ice or obstructed. 3. “Pac-Man” cubes.	1. Replace icemaker modular head. 2. Clear obstruction. 3. Check fill cup and fill tube alignment.
	<p style="text-align: center;">11:00 - 2:00 ejector position:</p> 1. No run when jumped between “T” & “H” ports. 2. Damaged contact fingers. 3. Cubes frozen to fill cup, mold or ice level arm.	1. Replace icemaker modular head. 2. Replace icemaker modular head. 3. Unjam and restart.
Overproduction of ice	1. Ice bucket out of position. 2. Ice level arm not in actuator. 3. Shut-off lever broken or bypassing. 4. Broken module actuator.	1. Reposition ice bucket. 2. Press ice level arm into actuator. 3. Replace icemaker modular head. 4. Replace icemaker modular head.
Hollow cubes	1. Water fill volume too low. 2. Improper freezer air flow. 3. Thermostat out of calibration.	1. Adjust water fill, or increase supply water pressure. 2. See GENERAL TROUBLESHOOTING GUIDE . 3. Replace thermostat (apply fresh alumi- lastic).


ICEMAKER TROUBLESHOOTING GUIDE

Complaint	Possible Cause	Correction
Water or ice slab in ice bucket or freezer compartment	<ol style="list-style-type: none"> 1. Thermostat out of calibration. 2. Jammed cubes during water fill (11:00 ejector position). 3. Leaky water valve. 4. Excessive fill volume. 5. Motor stalled during water fill (11:00 ejector position). 6. fill tube not properly installed in fill cup. 7. Fill cup broken. 8. Ice cubes fell over back of icemaker or missed ice bucket. 9. White and brown wires reversed on harness. 10. Shorted water fill track on module. 	<ol style="list-style-type: none"> 1. Replace thermostat (apply fresh alumi-lastic). 2. Remove jam, determine reason for cube stall. 3. Replace water valve. 4. Adjust water fill, or replace water valve, or decrease supply water pressure. 5. Replace icemaker modular head. 6. Adjust fill tube. 7. Replace fill cup. 8. Adjust fill tube and/or ice bucket. 9. Repair wiring and replace icemaker. 10. Replace icemaker modular head.
Noisy	<ol style="list-style-type: none"> 1. Motor or gear grinding during production. 2. Screeching during ejection. 3. Excessive noise during water fill. 4. Water flowing through valve, ice falling in ice bucket, ice level arm falling to down position. 	<ol style="list-style-type: none"> 1. Replace icemaker modular head. 2. Lubricate vertical cam end or replace icemaker modular head. 3. Replace water valve or adjust water supply line. 4. Normal operation, no repairs needed, instruct customer.
Jammed cubes	<ol style="list-style-type: none"> 1. Cubes hollow or too small. 2. Cubes fell back into mold (Pac-Man). 3. Mound on top of cubes. 4. Icemaker and/or unit not level. 	<ol style="list-style-type: none"> 1. See HOLLOW CUBES section above. 2. Check fill cup and fill tube alignment. 3. Cubes freezing too fast, adjust freezer temperature and/or air flow. 4. Level as needed.

COMPONENT TECHNICAL INFORMATION					
Model	700TR	700TC/I	700TF/I	700BR	700BF/I
Refrigerant	134a(8 oz.)	134a(8 oz.)	134a(8 oz.)	134a(6 oz.)	134a(6 oz.)
Compressor	Embraco (EMI30HER) 280BTU .9 AMPS	Embraco (FHS70HA) 715BTU 1.2 AMPS	Americold (RH108) 840BTU 1.4 AMPS	Embraco (EMI30HER) 280BTU .9 AMPS	Embraco (FHS70HA) 715BTU 1.2 AMPS
Sealed System Pressures	*	*	*	*	*
Drain Tube Heater		1900 OHMS	1900 OHMS		1900 OHMS
Defrost Heater		21 OHMS	21 OHMS		27 OHMS
Defrost Terminator		70°F cut-out 30°F cut-in	70°F cu-tout 30°F cut-in		70°F cu-tout 30°F cut-in
Thermistor	32500 OHMS at 32°F 10000 OHMS at 77°F	32500 OHMS at 32°F 10000 OHMS at 77°F	32500 OHMS at 32°F 10000 OHMS at 77°F	32500 OHMS at 32°F 10000 OHMS at 77°F	32500 OHMS at 32°F 10000 OHMS at 77°F
Air Baffle Coils	5-25 OHMS	5-25 OHMS		5-25 OHMS	

* See front of SEALED SYSTEM TROUBLESHOOTING GUIDE.

WIRING DIAGRAM - 700TR

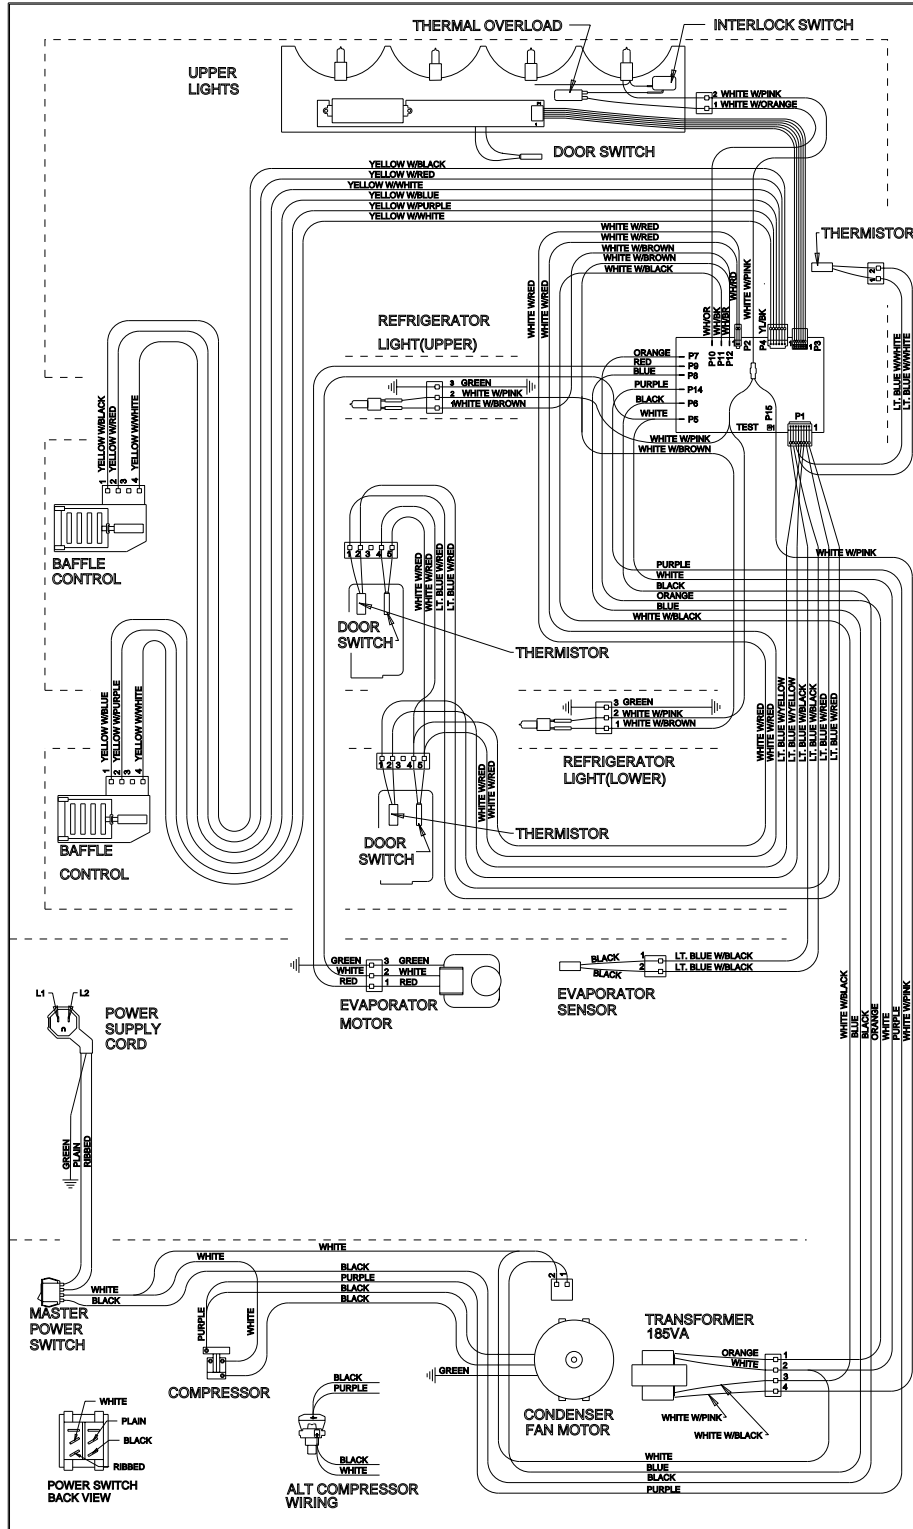


WARNING

This wiring information is provided for use by qualified service personnel only.

Disconnect appliance from electrical supply before beginning service.

Be sure all grounding devices are connected when service is completed.


Failure to observe the above warnings may result in severe electrical shock.

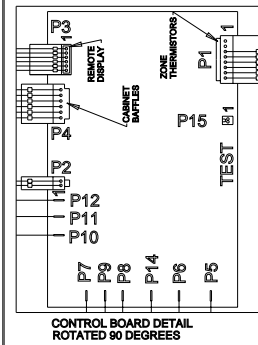


TERM.	NO.	COLOR
P1	1	EMPTY
P1	2	EMPTY
P1	3	LT. BLUE W/WHITE
P1	4	LT. BLUE W/WHITE
P1	5	LT. BLUE W/WHITE
P1	6	LT. BLUE W/BLACK
P1	7	LT. BLUE W/BLACK
P1	8	LT. BLUE W/BLACK
P1	9	LT. BLUE W/BLACK
P1	10	LT. BLUE W/BLACK
P1	11	LT. BLUE W/BLACK
P1	12	LT. BLUE W/BLACK
P1	13	LT. BLUE W/BLACK
P1	14	LT. BLUE W/BLACK
P1	15	LT. BLUE W/BLACK

TERM.	DESCRIPTION	COLOR	ABBR.
P1	THERMISTORS	SEE AUX. CHART	---
P2	LIGHT SWITCH	WHITE/RED	WH/RED
P3	REMOTE DISPLAY	SEE AUX. CHART	---
P4	BAFFLES	SEE AUX. CHART	---
P5	L2-NEUTRAL 115	WHITE	WHITE
P6	L1-HOT 115	BLACK	BLACK
P7	LIGHTS-120V OUT	ORANGE	ORANG
P8	---	---	---
P9	EVAPORATOR FAN	RED	RED
P10	LIGHT ZONE 1	WHITE/ORANGE	WH/OR
P11	TRANSFORMER IN-12V	WHITE/BLACK	WH/KB
P12	LIGHTS-LOWER-12V	WHITE/BROWN	WH/BR
P13	---	---	---
P14	COMPRESSOR	PURPLE	PURPL
P15	MANUFACTURING TEST	---	---

WIRING SCHEMATIC - 700TR

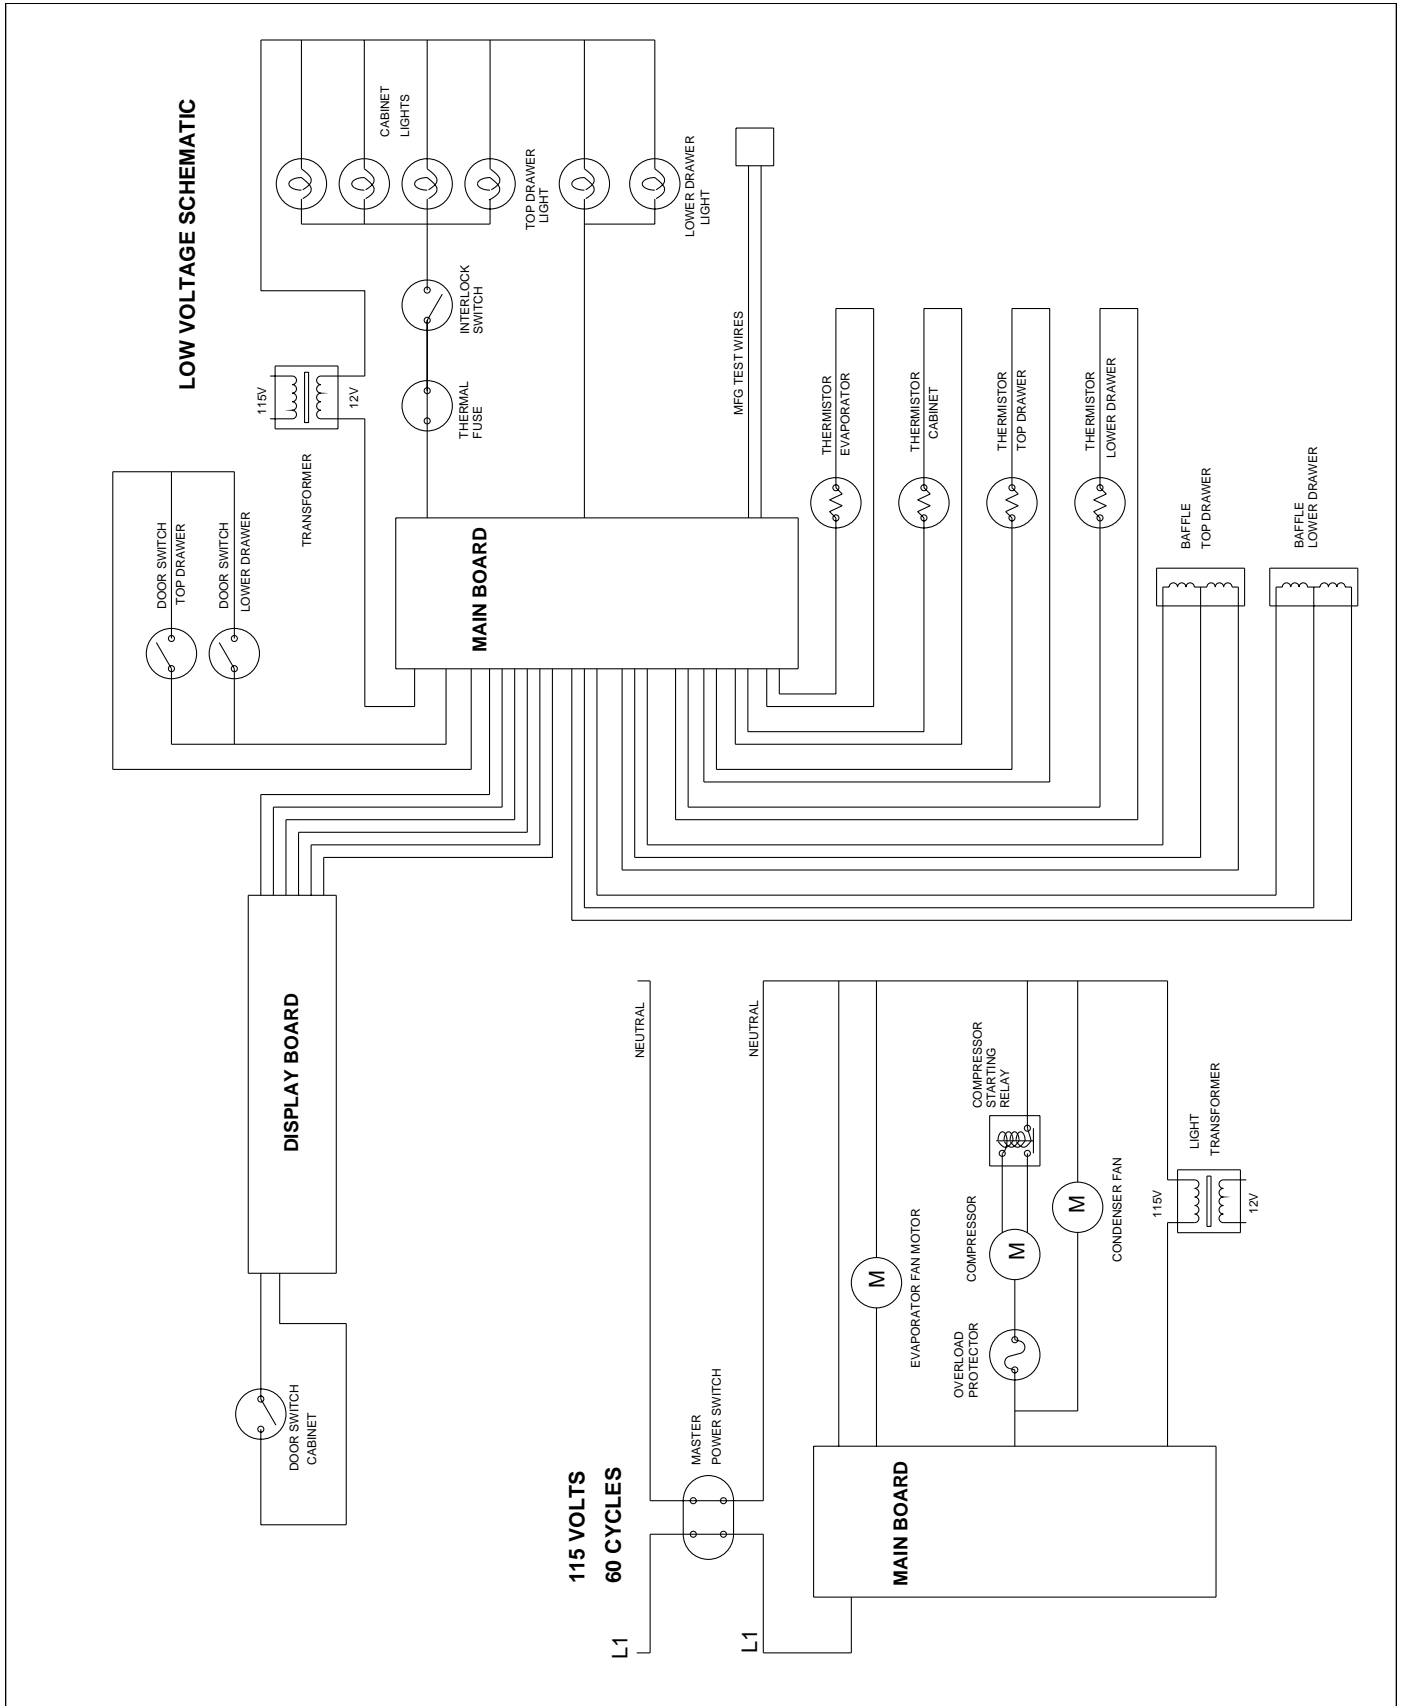

WIRING DIAGRAM - 700TC/I

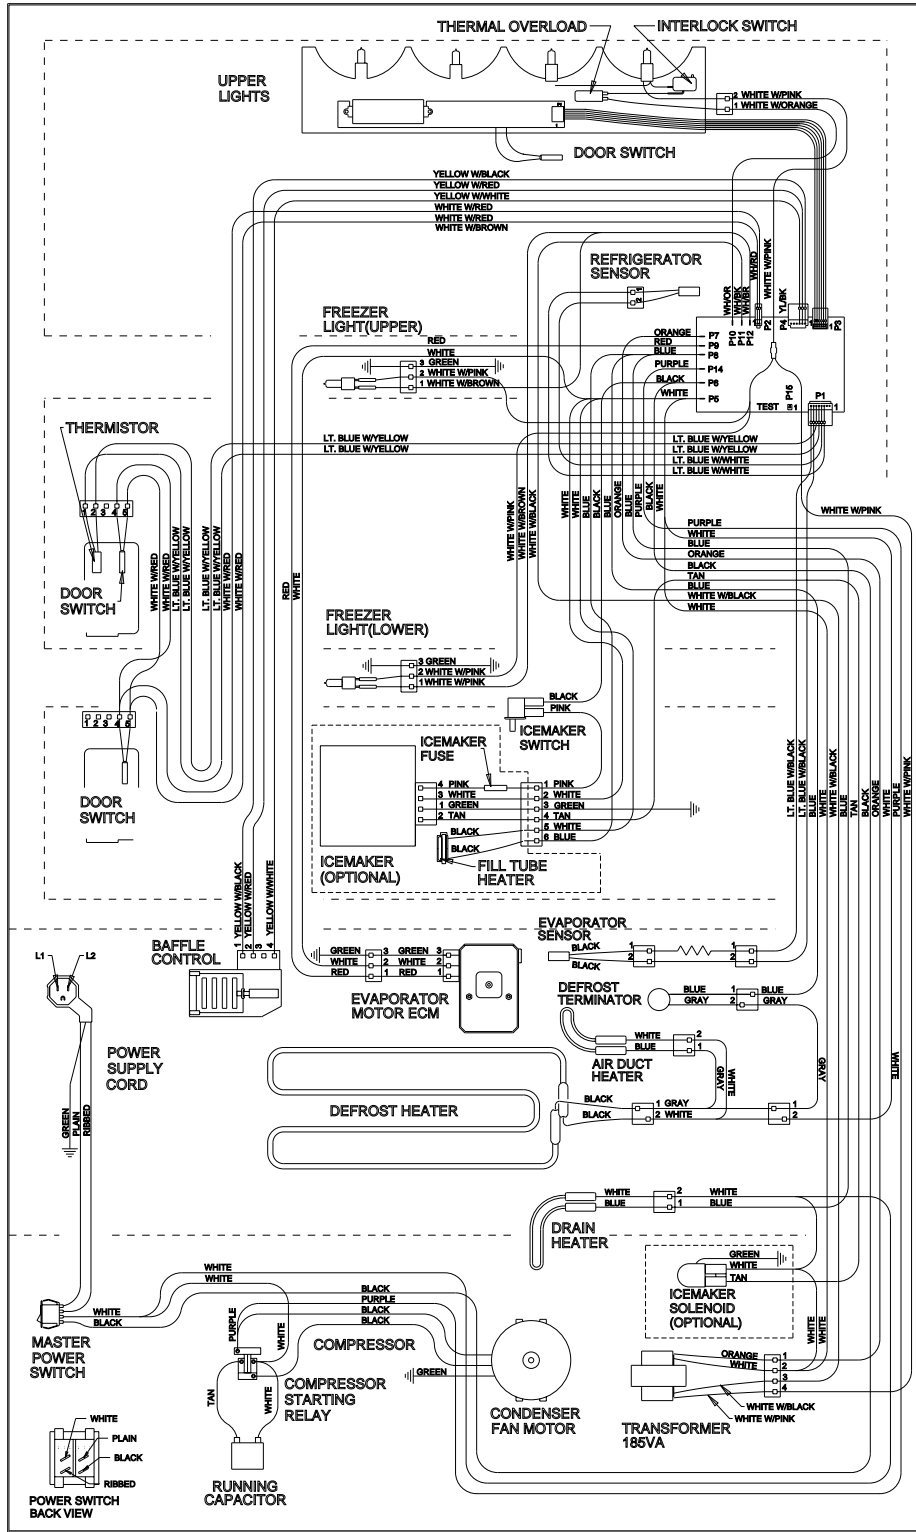


WARNING

This wiring information is provided for use by qualified service personnel only.

Disconnect appliance from electrical supply before beginning service.

Be sure all grounding devices are connected when service is completed.

Failure to observe the above warnings may result in severe electrical shock.

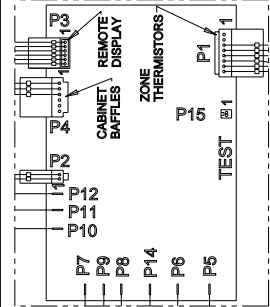


AUXILIARY CHART


TERM.	NO#	COLOR
P1	1	EMPTY
P1	2	EMPTY
P1	3	LT. BLUE W/WHITE
P1	4	LT. BLUE W/YELLOW
P1	5	LT. BLUE W/BLACK
P1	6	LT. BLUE W/WHITE
P1	7	LT. BLUE W/YELLOW
P1	8	LT. BLUE W/BLACK
P1	9	BLACK
P1	10	RED
P1	11	ORANGE
P1	12	BLUE
P1	13	YELLOW/BLACK
P1	14	YELLOW/WHITE
P1	15	EMPTY
P1	16	EMPTY

TERM.	DESCRIPTION	COLOR	ABBR.
P1	THERMISTORS	SEE AUX. CHART	—
P2	LIGHT SWITCH	WH/RED	WH/RED
P3	REMOTE DISPLAY	SEE AUX. CHART	—
P4	BAFFLES	SEE AUX. CHART	—
P5	L2-NEUTRAL 115	WHITE	WHITE
P6	L1-HOT 115	BLACK	BLACK
P7	LIGHTS-120V OUT	ORANGE	ORANG
P8	LIGHTS-120V OUT	ORANGE	ORANG
P9	DEFROST HEATER	RED	RED
P10	EVAPORATOR FAN	WHITE/ORANGE	WH/OR
P11	LIGHT ZONE 1	WHITE/BLACK	WH/BLK
P12	TRANSFORMER IN-12V	WHITE/BROWN	WH/BR
P13	TRANSFORMER IN-12V	WHITE/BROWN	WH/BR
P14	COMPRESSOR	PURPLE	PURPL
P15	MANUFACTURING TEST	—	TEST

WIRING SCHEMATIC - 700TC/I

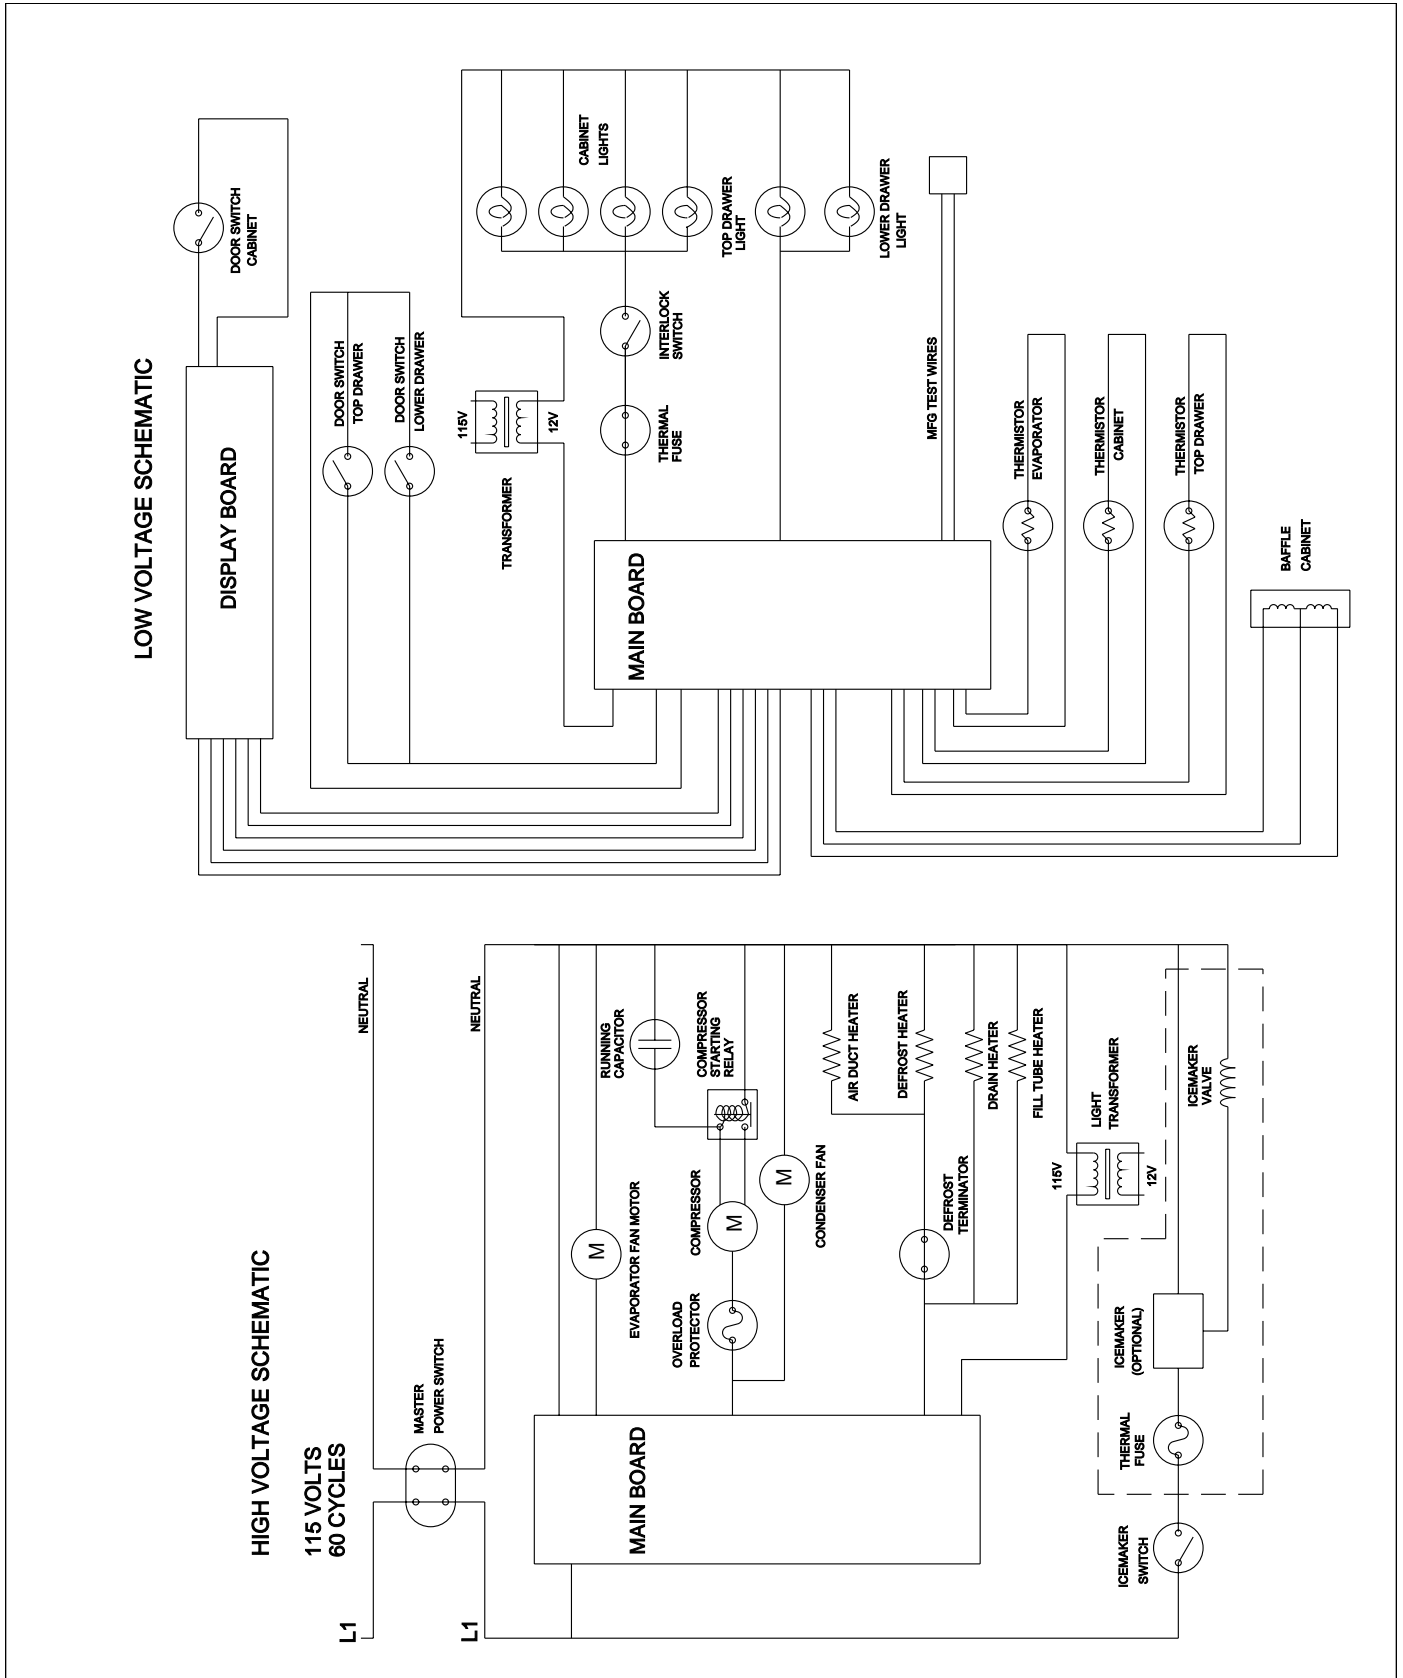

WIRING DIAGRAM - 700TF/I

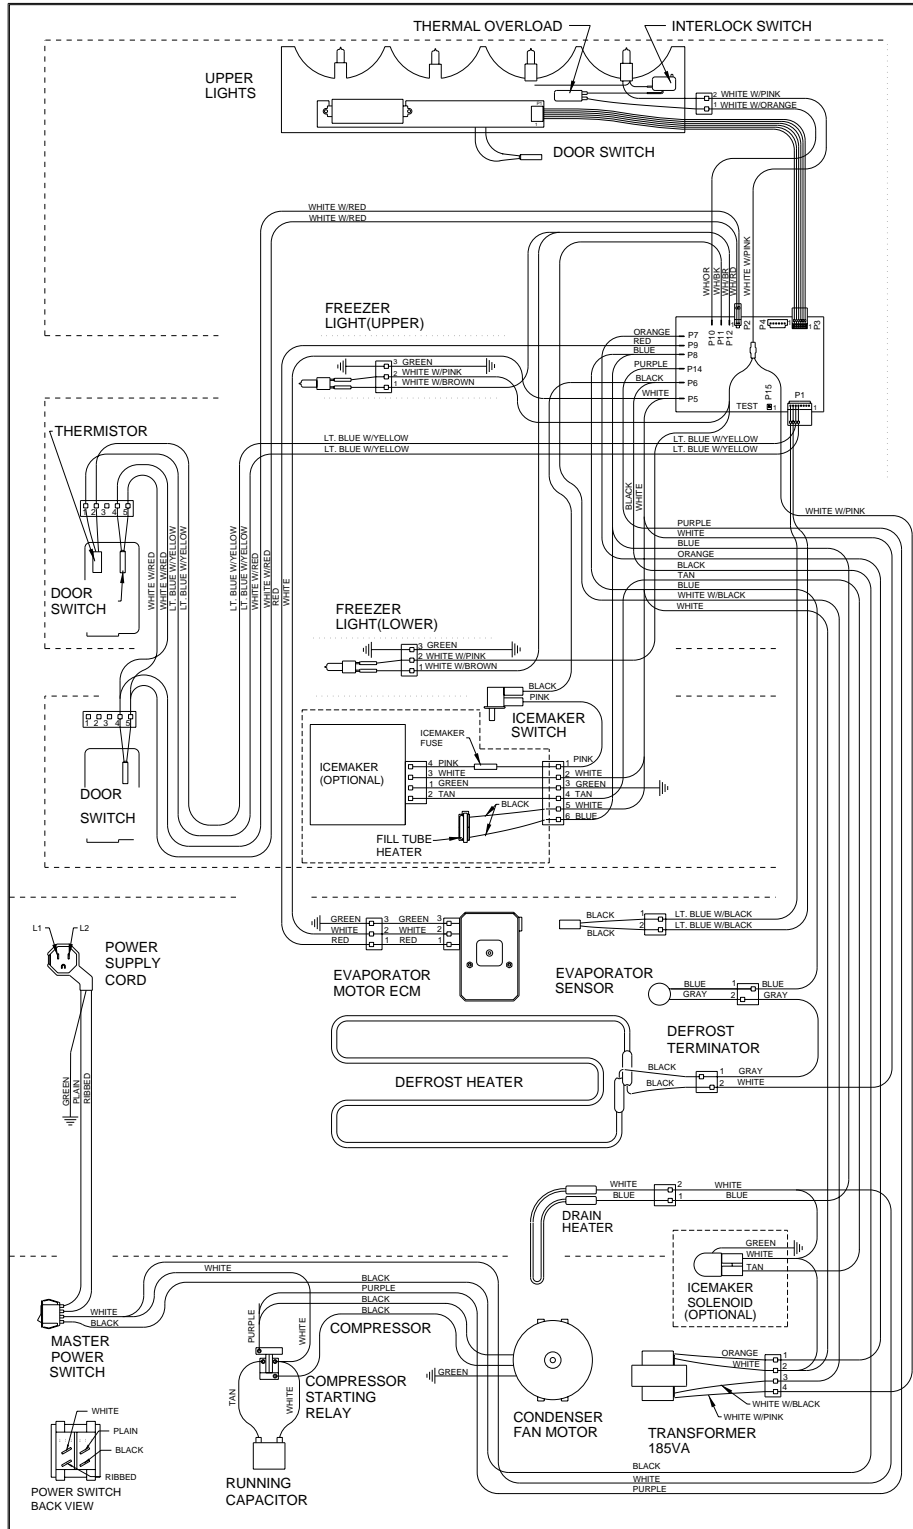


WARNING

This wiring information is provided for use by qualified service personnel only.

Disconnect appliance from electrical supply before beginning service.

Be sure all grounding devices are connected when service is completed.

Failure to observe the above warnings may result in severe electrical shock.

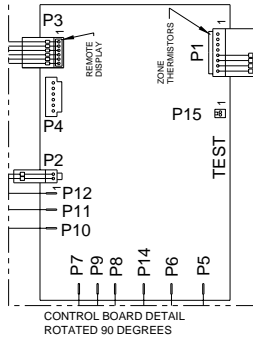


TERM.	DESCRIPTION	COLOR	ABBR.
P1	THERMISTORS	SEE AUX. CHART	WHDR
P2	LIGHT SWITCH	WHITERED
P3	REMOTE DISPLAY	SEE AUX. CHART
P5	L2 NEUTRAL 115	WHITE	WHITE
P6	L1 HOT 115	BLACK	BLACK
P7	LIGHTS 120V/OUT	ORANGE	ORANG
P8	LIGHTS 120V/IN	BLUE	BLUE
P9	DEFROST HEATER	RED	RED
P10	DEFROST FAN	WHITE/ORANGE	WHOR
P11	TRANSFORMER IN-12V	WHITE/BLACK	WHBR
P12	TRANSFORMER OUT-12V	WHITE/BROWN	WHBR
P13	LIGHTS-LOWER-12V	WHITE/BROWN	WHBR
P14	COMPRESSOR	PURPLE	PURPL
P15	MANUFACTURING TEST	TEST


TERM.	NO#	COLOR
P1	1	EMPTY
	2	EMPTY
	3	EMPTY
	4	EMPTY
	5	LT. BLUE W/YELLOW
	6	LT. BLUE W/YELLOW
	7	LT. BLUE W/BLACK
	8	LT. BLUE W/BLACK
P3	1	BLACK
	2	WHITE
	3	YELLOW
	4	ORANGE
	5	ORANGE
	6	BLUE

AUXILIARY CHART

WIRING SCHEMATIC - 700TF/I

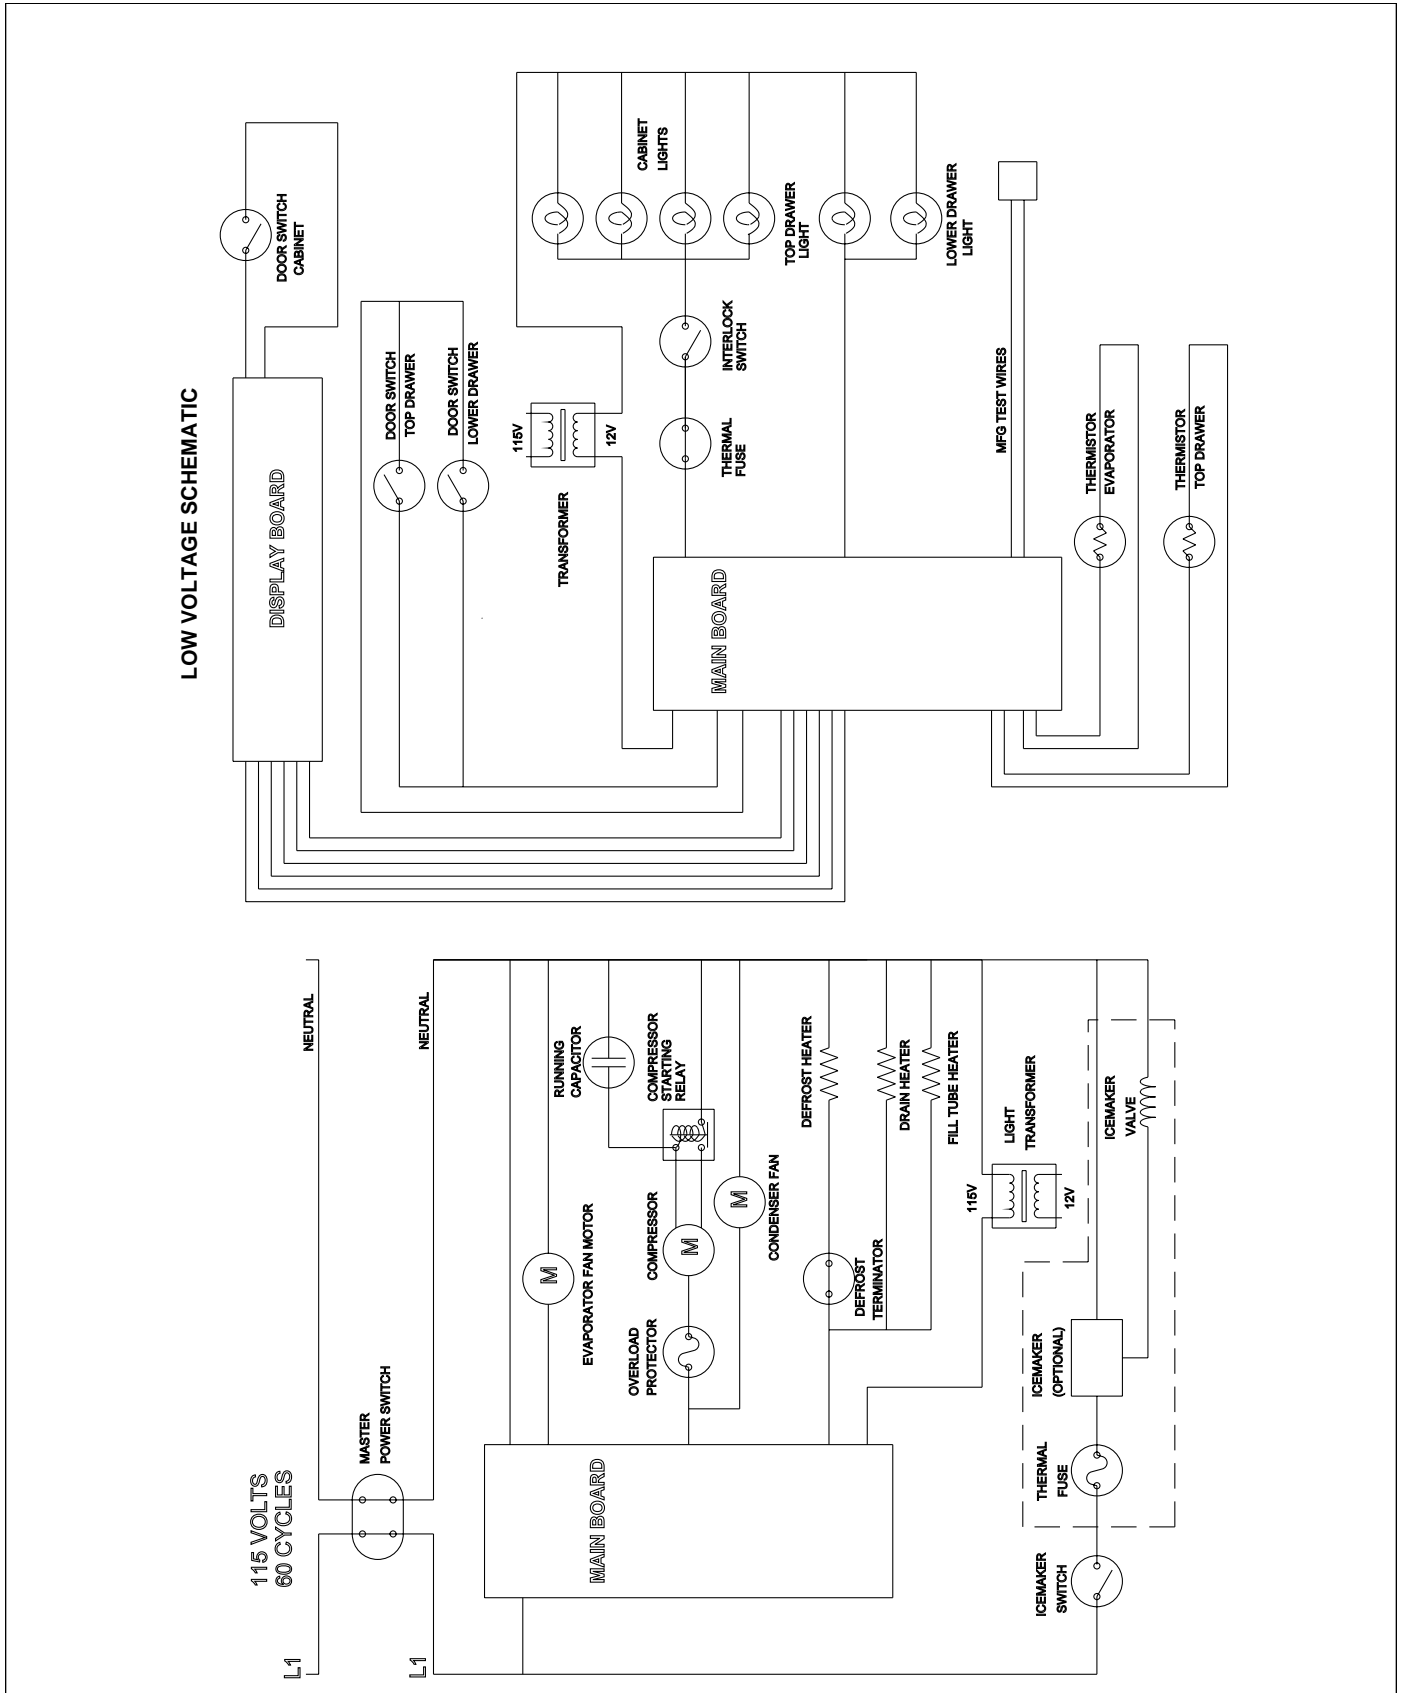

WIRING DIAGRAM - 700BR

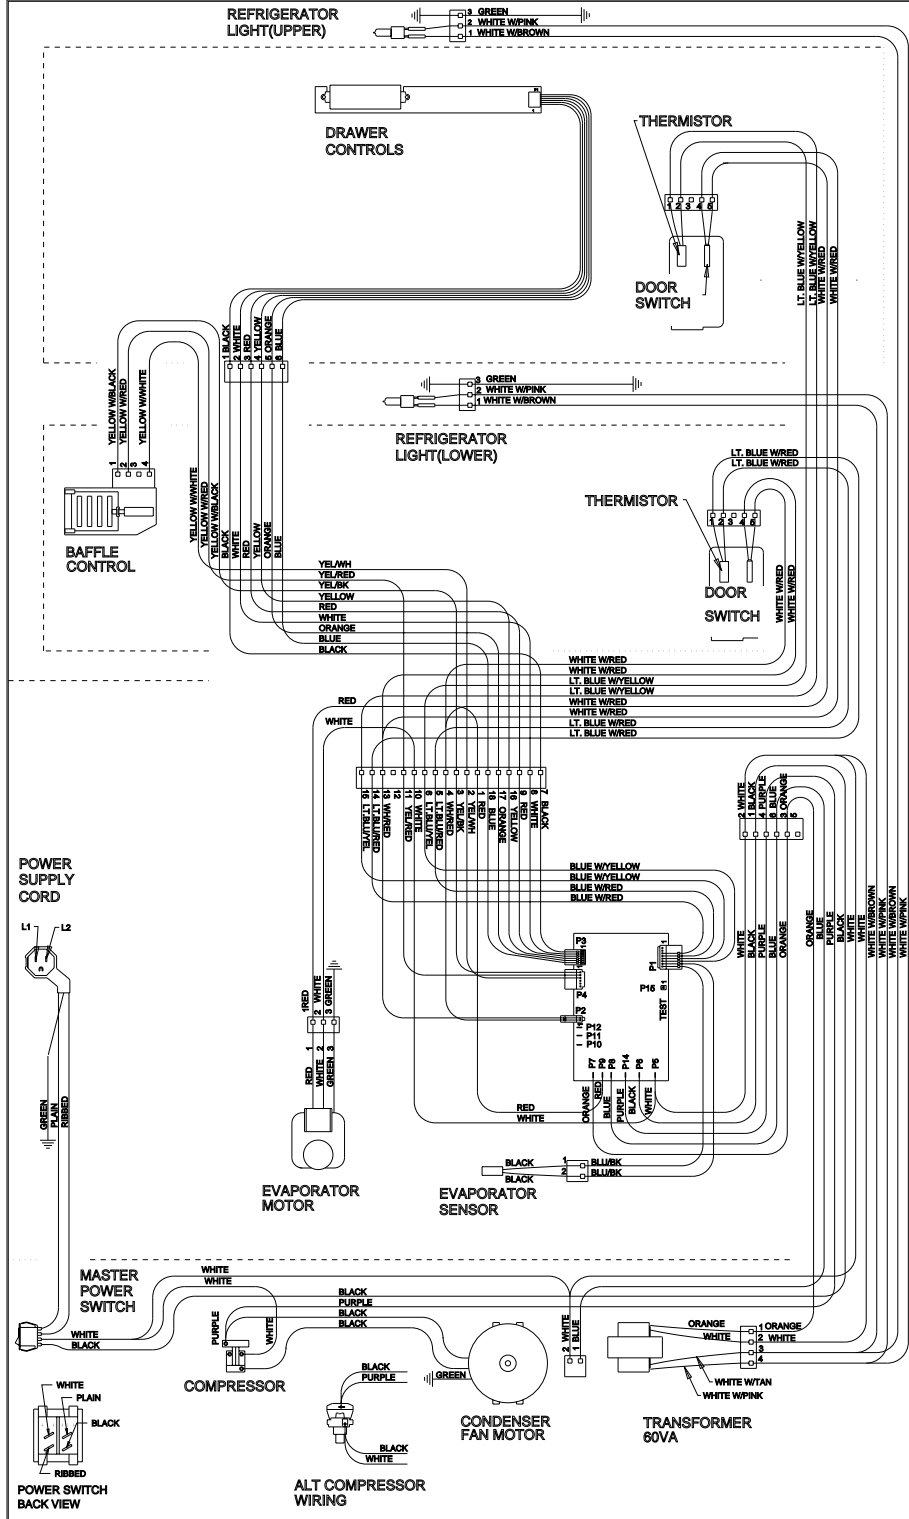


WARNING

This wiring information is provided for use by qualified service personnel only.

Disconnect appliance from electrical supply before beginning service.

Be sure all grounding devices are connected when service is completed.

Failure to observe the above warnings may result in severe electrical shock.

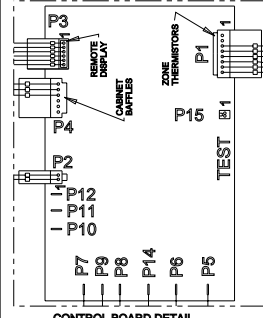


AUXILIARY CHART


TERM.	NUM	COLOR
P1	1	EMPTY
P1	2	EMPTY
P1	3	LT. BLUE/WHITE
P1	4	LT. BLUE/WHITE
P1	5	LT. BLUE/W/BLACK
P1	6	LT. BLUE/W/BLACK
P1	7	LT. BLUE/W/BLACK
P1	8	LT. BLUE/W/BLACK
P1	9	BLACK
P1	10	WHITE
P1	11	RED
P1	12	ORANGE
P1	13	ORANGE
P1	14	ORANGE
P1	15	ORANGE
P1	16	ORANGE
P1	17	ORANGE
P1	18	ORANGE
P1	19	ORANGE
P1	20	ORANGE
P1	21	ORANGE
P1	22	ORANGE
P1	23	ORANGE
P1	24	ORANGE
P1	25	ORANGE
P1	26	ORANGE
P1	27	ORANGE
P1	28	ORANGE
P1	29	ORANGE
P1	30	ORANGE
P1	31	ORANGE
P1	32	ORANGE
P1	33	ORANGE
P1	34	ORANGE
P1	35	ORANGE
P1	36	ORANGE
P1	37	ORANGE
P1	38	ORANGE
P1	39	ORANGE
P1	40	ORANGE
P1	41	ORANGE
P1	42	ORANGE
P1	43	ORANGE
P1	44	ORANGE
P1	45	ORANGE
P1	46	ORANGE
P1	47	ORANGE
P1	48	ORANGE
P1	49	ORANGE
P1	50	ORANGE
P1	51	ORANGE
P1	52	ORANGE
P1	53	ORANGE
P1	54	ORANGE
P1	55	ORANGE
P1	56	ORANGE
P1	57	ORANGE
P1	58	ORANGE
P1	59	ORANGE
P1	60	ORANGE
P1	61	ORANGE
P1	62	ORANGE
P1	63	ORANGE
P1	64	ORANGE
P1	65	ORANGE
P1	66	ORANGE
P1	67	ORANGE
P1	68	ORANGE
P1	69	ORANGE
P1	70	ORANGE
P1	71	ORANGE
P1	72	ORANGE
P1	73	ORANGE
P1	74	ORANGE
P1	75	ORANGE
P1	76	ORANGE
P1	77	ORANGE
P1	78	ORANGE
P1	79	ORANGE
P1	80	ORANGE
P1	81	ORANGE
P1	82	ORANGE
P1	83	ORANGE
P1	84	ORANGE
P1	85	ORANGE
P1	86	ORANGE
P1	87	ORANGE
P1	88	ORANGE
P1	89	ORANGE
P1	90	ORANGE
P1	91	ORANGE
P1	92	ORANGE
P1	93	ORANGE
P1	94	ORANGE
P1	95	ORANGE
P1	96	ORANGE
P1	97	ORANGE
P1	98	ORANGE
P1	99	ORANGE
P1	100	ORANGE

TERM.	DESCRIPTION	COLOR	ABBR.
P1	THERMISTORS	SEE AUX. CHART	WH/YL
P2	LIGHT SWITCH	WH/RED	WH/RD
P3	REMOTE DISPLAY	SEE AUX. CHART	---
P4	CABINET BAFFLES	SEE AUX. CHART	---
P5	L2-NEUTRAL 115	WHITE	---
P6	L1-HOT 115	BLACK	---
P7	L1-HOT 120V OUT	ORANGE	ORANG
P8	EVAPORATOR FAN	RED	RED
P9	---	---	---
P10	---	---	---
P11	---	---	---
P12	---	---	---
P13	---	---	---
P14	COMPRESSOR	PURPLE	PURPL
P15	MANUFACTURING TEST	TEST	TEST

WIRING SCHEMATIC - 700BR

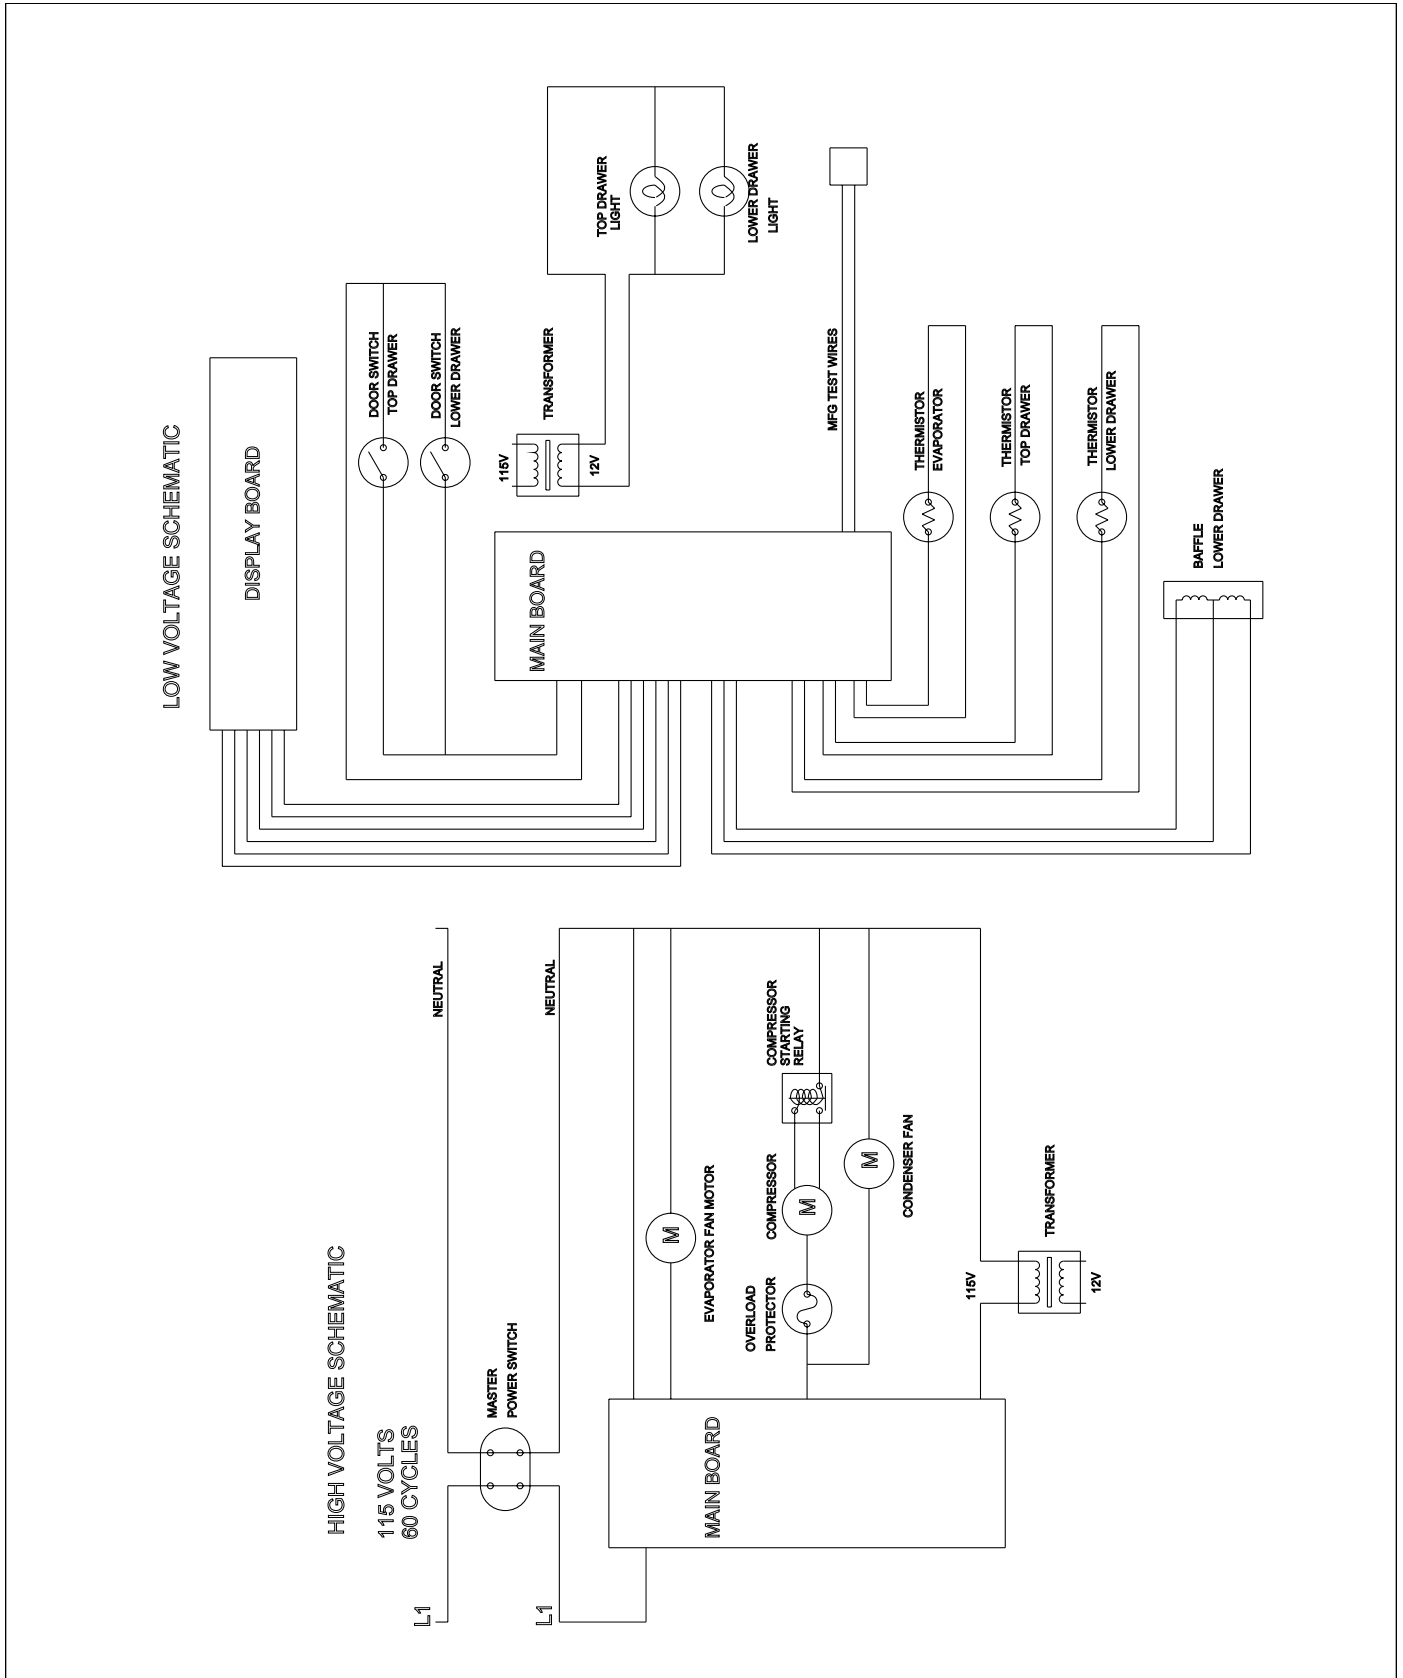

WIRING DIAGRAM - 700BF/I

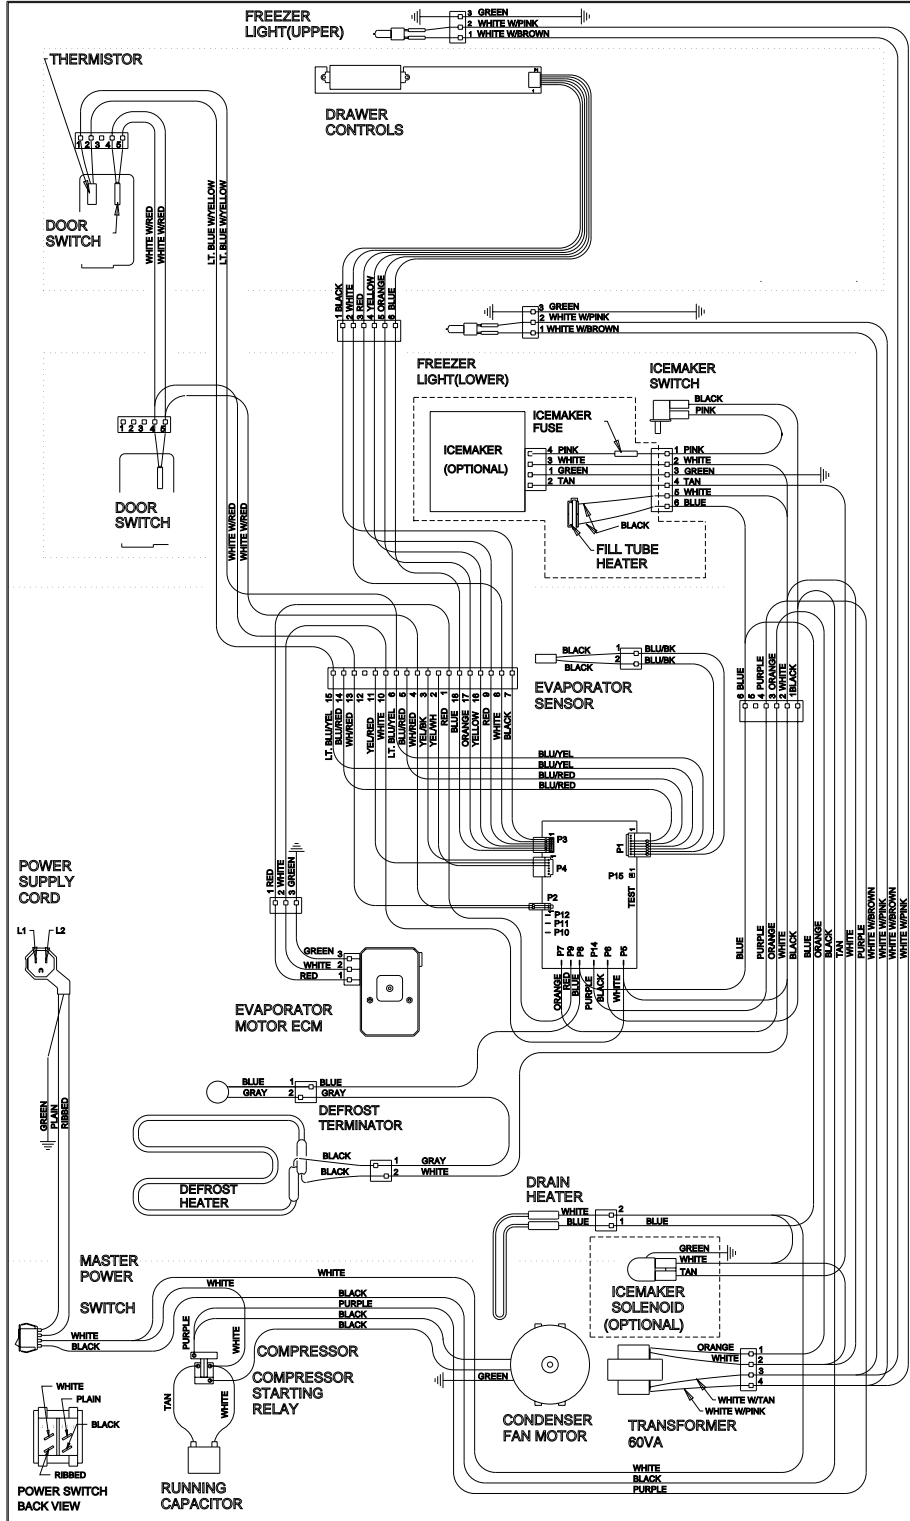


WARNING

This wiring information is provided for use by qualified service personnel only.

Disconnect appliance from electrical supply before beginning service.

Be sure all grounding devices are connected when service is completed.

Failure to observe the above warnings may result in severe electrical shock.

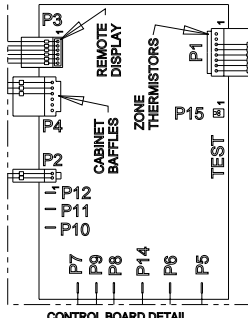

AUXILIARY CHART

TERM.	NO#	COLOR
P1	1	EMPTY
P1	2	EMPTY
P1	3	EMPTY
P1	4	LT. BLUE W/WHITE
P1	5	LT. BLUE W/WHITE
P1	6	LT. BLUE W/YELLOW
P1	7	LT. BLUE W/YELLOW
P1	8	LT. BLUE W/BLACK
P3	1	BLACK
P3	2	WHITE
P3	3	RED
P3	4	YELLOW
P3	5	ORANGE
P3	6	BLUE

TERM.	DESCRIPTION	COLOR	ABBR.
P1	THERMISTORS	SEE AUX. CHART	---
P2	LIGHT SWITCH	WHITERED	W/WRD
P3	REMOTE DISPLAY	SEE AUX. CHART	---
P4	BAFFLES	SEE AUX. CHART	---
P6	L2-NEUTRAL 115	WHITE	---
P6	L1-HOT 115	BLACK	---
P7	LIGHTS-120V OUT	ORANGE	ORANG
P8	DEFROST HEATER	BLUE	---
P9	EVAPORATOR FAN	RED	---
P10	---	---	---
P11	---	---	---
P12	---	---	---
P13	---	---	---
P14	COMPRESSOR	PURPLE	PURPL
P15	MANUFACTURING TEST	---	TEST

WIRING SCHEMATIC - 700BF/I

